



Level



Pressure



Flow



Temperature



Liquid
Analysis



Registration



Systems
Components



Services



Solutions

Technical Information

Solicap M FTI55, FTI56

Capacitance

Point level switch for bulk solids



Application

Solicap M is used for point level detection in bulk solids and can be operated in minimum or maximum fail-safe mode.

Due to its robust construction, it can also be used to provide accurate measurements in applications with very high tensile loads (up to 60 kN for rope version) or lateral loads (up to 300 Nm for rod version).

In combination with Fieldgate (for remote interrogation of measured values using internet technology), Solicap M represents an ideal solution for material provisioning and logistical optimization (inventory control).

Your benefits

- Extremely robust design for harsh process conditions
- Easy and fast commissioning as calibration is performed at the press of a button
- Universal application thanks to wide range of certificates and approvals
- Two-stage overvoltage protection against static discharges from the silo
- Active buildup compensation for bulk solids that tend to cake
- Use in safety systems with specific requirements in terms of functional safety to SIL2/SIL3 in conjunction with electronic insert FEI55
- Increased safety due to permanent automatic monitoring of electronics
- Reduction in storage costs thanks to easy-to-shorten rod model (for partial insulation) and rope model (for partial and full insulation)
- Two-point control (e.g. for controlling a handling device)

Table of contents

Function and system design	4
Measuring principle	4
Application examples	4
Measuring system	5
Electronic versions	7
System integration via Fieldgate	8
Operating conditions: Installation	9
General notes	9
Preparing to install rod probes FTI55	10
Preparing to install rope probes FTI56	12
Probe with separate housing	16
Operating conditions: Environment	18
Ambient temperature range	18
Storage temperature	18
Climate class	18
Degree of protection	18
Vibration resistance	18
Cleaning	18
Electromagnetic compatibility (EMC)	18
Shock resistance	18
Operating conditions: Process	19
Process temperature range	19
Process pressure and temperature derating	21
State of aggregation	22
Mechanical construction	23
Overview	23
Material	28
Weight	28
Input	29
Measured variable	29
Measuring range (valid for all FEI5x)	29
Input signal	29
Measuring conditions	29
Output	30
Galvanic isolation	30
Switch behavior	30
Switch-on behavior	30
Fail-safe mode	30
Switching delay	30
Electronic insert FEI51 (AC 2-wire)	31
Power supply	31
Electrical connection	31
Signal on alarm	31
Output signal	31
Connectable load	31
FEI52 electronic insert (DC PNP)	32
Power supply	32
Electrical connection	32

Output signal	32
Signal on alarm	32
Connectable load	32

Electronic insert FEI53 (3-wire) 33

Power supply	33
Electrical connection	33
Output signal	33
Signal on alarm	33
Connectable load	33

FEI54 electronic insert (AC/DC with relay output) 34

Power supply	34
Electrical connection	34
Output signal	34
Signal on alarm	34
Connectable load	34

Electronic insert FEI55 (8/16 mA; SIL2/SIL3) 35

Power supply	35
Electrical connection	35
Output signal	35
Signal on alarm	35
Connectable load	35

FEI57S electronic insert (PFM) 36

Power supply	36
Electrical connection	36
Output signal	36
Signal on alarm	36
Connectable load	36

Electronic insert FEI58 (NAMUR H-L edge) 37

Power supply	37
Electrical connection	37
Output signal	37
Signal on alarm	37
Connectable load	37

Power supply 38

Electrical connection	38
Connector	38
Cable entry	38

Performance characteristics 39

Reference operating conditions	39
Switch point	39
Ambient temperature effect	39

Human interface 40

Electronic inserts	40
Electronic inserts	41
Electronic insert	42


Certificates and approvals	43
CE approval	43
Additional certification	43
Other standards and guidelines	43
 Ordering information	 44
Solicap M FTI55	44
Solicap M FTI56	46
 Accessories	 48
Weather protection cover	48
Overvoltage protection HAW56x	48
Spare parts	48
 Documentation	 49
Technical Information	49
Operating Instructions	49
Certificates	49
Patents	49

Function and system design

Measuring principle

The principle of capacitance point level detection is based on the change in capacitance of a capacitor as a result of the probe being covered by bulk solids. The probe and container wall (conductive material) form an electric capacitor. When the probe is in air (1), a certain low initial capacitance is measured. If the container is being filled, the capacitance of the capacitor increases as more of the probe is covered (2), (3).

The point level switch switches when the capacitance C_S specified during calibration is reached. In addition, a probe with inactive length ensures that the effects of medium buildup or condensate near the process connection are avoided. A probe with active buildup compensation compensates for the effects of buildup on the probe in the area of the process connection.

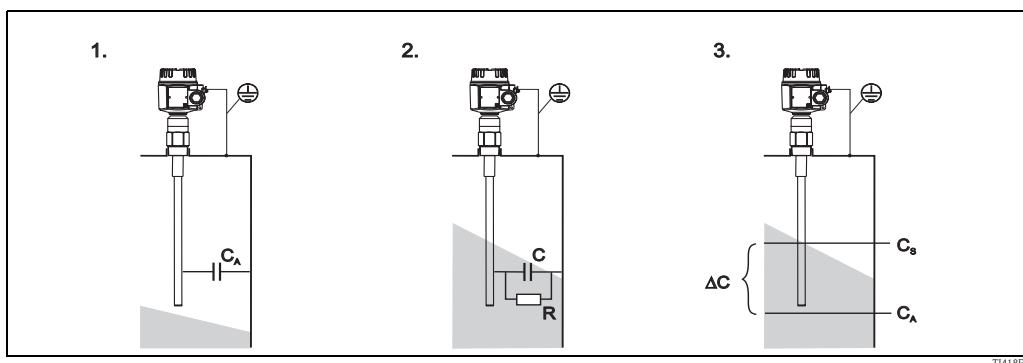

R: Conductivity of bulk solids
C: Capacitance of bulk solids
 C_A : Initial capacitance (probe not covered)
 C_S : Switching capacitance
 ΔC : Change in capacitance

Function

The electronic insert selected for the probe determines the change in capacitance depending on how much of the probe is covered. This ensures accurate switching at the switchpoint (level) calibrated for this purpose.

Application examples

Sand, glass aggregate, gravel, molding sand, lime, ore (crushed), plaster, aluminum shavings, cement, grain, pumice, flour, dolomite, sugar beet, kaolin, fodder and similar bulk solids.

In general:

Bulk solids with a relative dielectric constant $\epsilon_r \geq 2.5$.


Measuring system

The make-up of the measuring system depends on the electronic insert selected.

Point level switch

The complete measuring system consists of:

- the point level switch, Solicap M FTI55 or FTI56
- An electronic insert FEI51, FEI52, FEI54

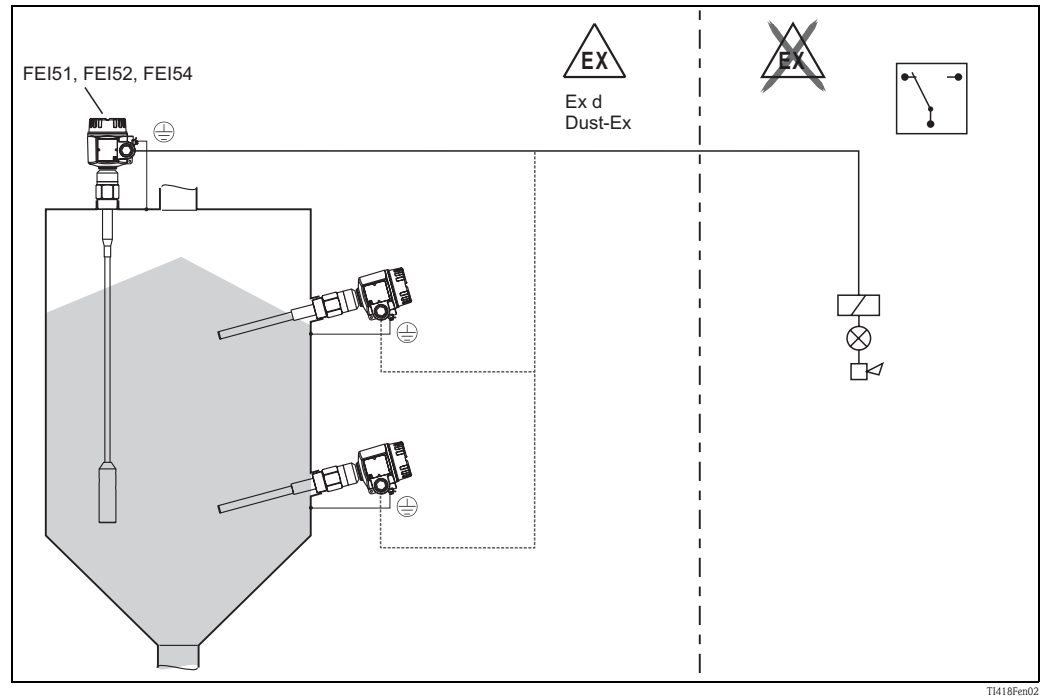


T1418Fen02

Two-point control (Δs function)

Note!

Partially insulated probes only in conjunction with nonconductive bulk solids.

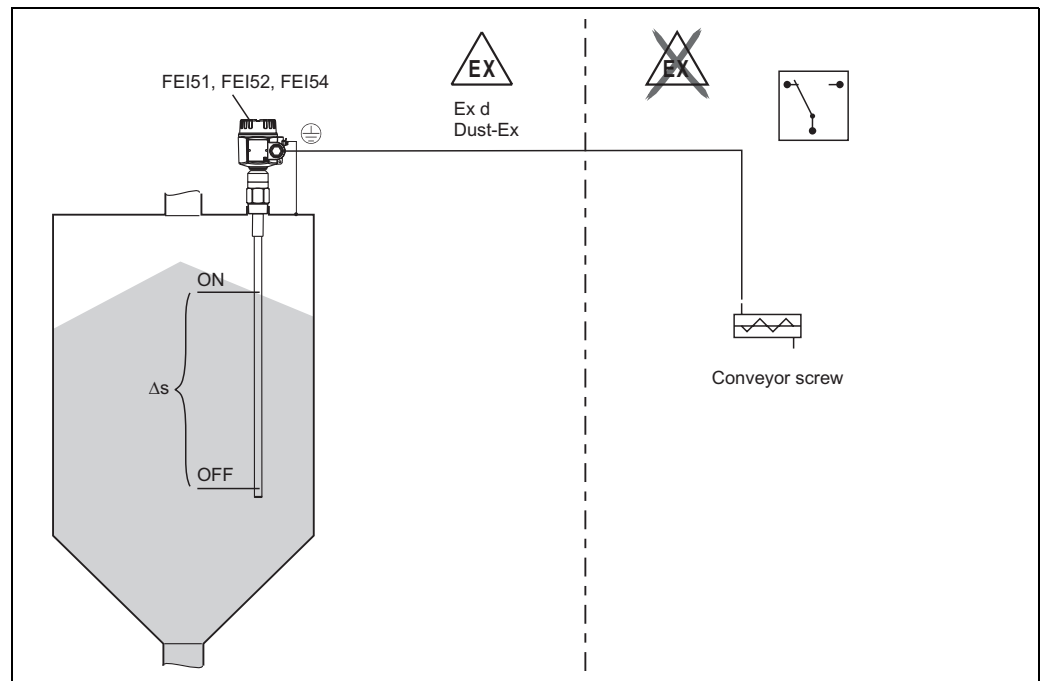

T1418Fen03


The point level switch can also be used to control a screw conveyor, for example, where the on and off values can be freely defined.

Point level switch

Solicap M FTI5x with electronic versions FEI53, FEI57S and FEI58 for connecting to a separate switching unit.

The complete measuring system consists of:

- the capacitance point level switch, Solicap M FTI55 or FTI56
- an electronic insert FEI53, FEI57S, FEI58
- a transmitter power supply unit e.g. FTC325, FTC625 (SW V1.4 or higher), FTC470Z, FTC471Z, FTL325N, FTL375N

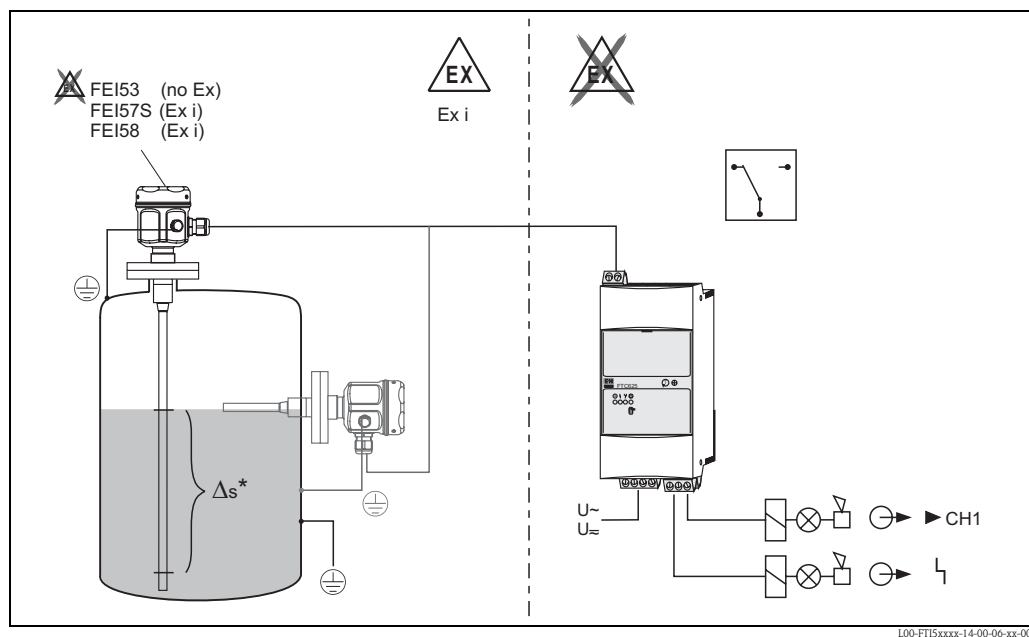

* Only possible with FEI53

The following table shows the transmitter power supply units available which can be operated with electronic inserts FEI57S and FEI53.

Electronic insert	FEI57S	FEI53	FEI58
Transmitter power supply unit			
FTC625	X	—	—
FTC325	X	X	—
FTL325N	—	—	X
FTL375N	—	—	X
FTC470Z	X	—	—
FTC471Z	X	—	—
FTC520Z*	X	—	—
FTC521Z*	X	—	—
FTC420*	—	X	—
FTC421*	—	X	—
FTC422*	—	X	—

x Combination is possible


— Combination is not possible

* Product phase-out 2006

Point level switch 8/16 mA

The complete measuring system consists of:

- the point level switch, Solicap M FTI55 or FTI56
- the FEI55 electronic insert
- a transmitter power supply unit (e.g. RN221N, RNS221, RMA421, RMA422)

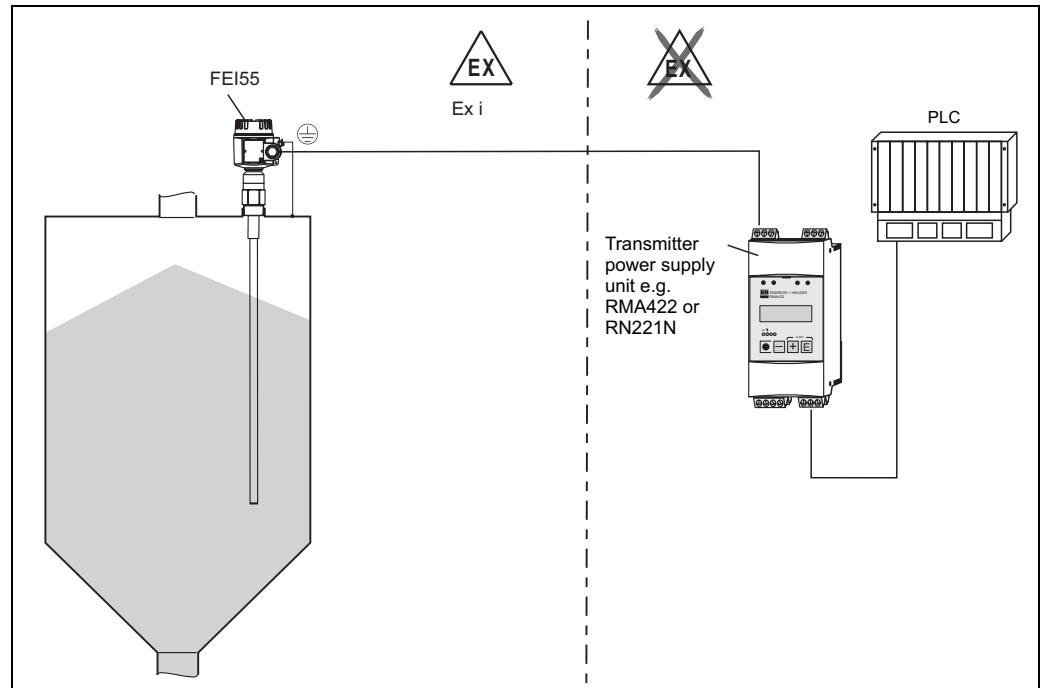

TI418Fen07

Electronic versions**FEI51**

Two-wire AC connection

- Load switched directly into the power supply circuit via the thyristor.
- Point level adjustment directly at the point level switch.

FEI52

3-wire direct current version:

- Switch the load via the transistor (PNP) and separate supply voltage connection.
- Point level adjustment directly at the point level switch.

FEI53

3-wire direct current version with 3 to 12 V signal output:

- For separate switching unit, Nivotester FTC325 3-WIRE.
- Point level adjustment directly at the switching unit.

FEI54

Universal current version with relay output:

- Switch the loads via 2 floating changeover contacts (DPDT).
- Point level adjustment directly at the point level switch.

FEI55

Signal transmission 8/16 mA on two-wire cabling:

- SIL2 approval for the hardware
- SIL3 approval for the software
- For separate switching unit (e.g. RN221N, RNS221, RMA421, RMA422).
- Point level adjustment directly at the point level switch.

FEI57S

PFM signal transmission (current pulses are superimposed on the supply current):

- For separate switching unit with PFM signal transmission e.g. FTC325 PFM, FTC625 PFM and FTC470Z/471Z

- Self-test from the switching unit without changing levels.
- Point level adjustment directly at the point level switch.
- Cyclical checking from the switching unit.

FEI58 (NAMUR)

Signal transmission H-L edge 2.2 to 3.5 / 0.6 to 1.0 mA as per IEC 60947-5-6 on two-wire cable:

- For a separate switching unit (e.g. Nivotester FTL325N and FTL375N).
- Point level adjustment directly at the point level switch.
- Test the connection cables and slaves by pressing the button on the electronic insert.



Note!

For additional information see → 31 ff.


System integration via Fieldgate

Vendor managed inventory

The remote interrogation of tank or silo levels via Fieldgate enables suppliers of raw materials to gather information about the current inventories of their regular customers at any time and, for example, to take this into account in their own production planning. The Fieldgate monitors the configured point levels and automatically triggers the next order as required. Here, the range of possibilities ranges from simple requisitioning by e-mail through to fully automatic order processing by incorporating XML data into the planning systems on both sides.

Remote maintenance of measuring systems

Not only does Fieldgate transmit the current measured values, it also alerts the standby personnel responsible by e-mail or SMS as required. Fieldgate forwards the information transparently. In this way, all options of the operating software in question are available remotely. By using remote diagnosis and remote configuration some onsite service operations can be avoided and all others can at least be planned and prepared better.

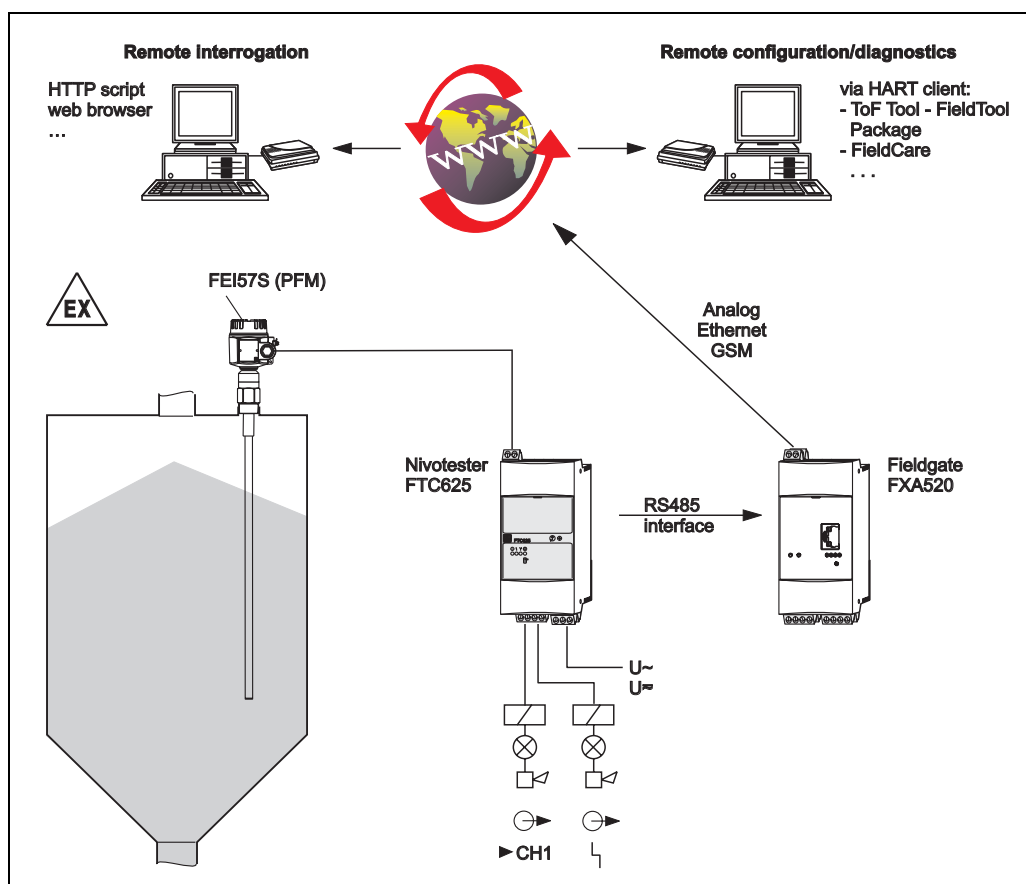

Operating conditions: Installation



Note!
All dimensions in mm.

General notes

Filling the silo

The filling stream should not be directed onto the probe.

Angle of material flow

Note the expected angle of the material flow or of the outlet funnel when determining the mounting location or probe length.

Distance between probes

When installing several probes in a silo, a minimum distance of 0.5 m between the probes must be observed.

Threaded coupling for mounting

When installing the Solicap M FTI55, FTI56, the threaded coupling should be as short as possible.


Condensation or product residue may occur in a long threaded coupling and interfere with the correct operation of the probe.

Heat insulation


In the event of high temperatures in the silo:

Insulate the external silo wall to avoid exceeding the permitted temperature of the Solicap M housing.

Heat insulation also prevents condensation from forming near the threaded boss in the silo. This reduces buildup and the risk of error switching.

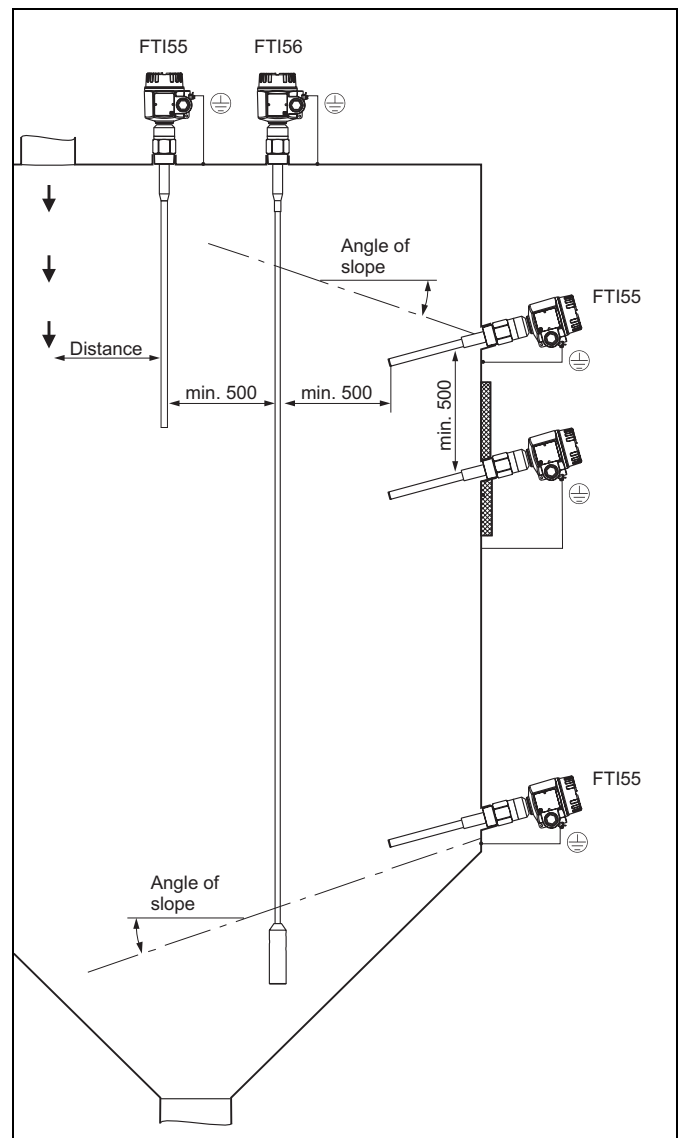

Preparing to install rod probes FTI55

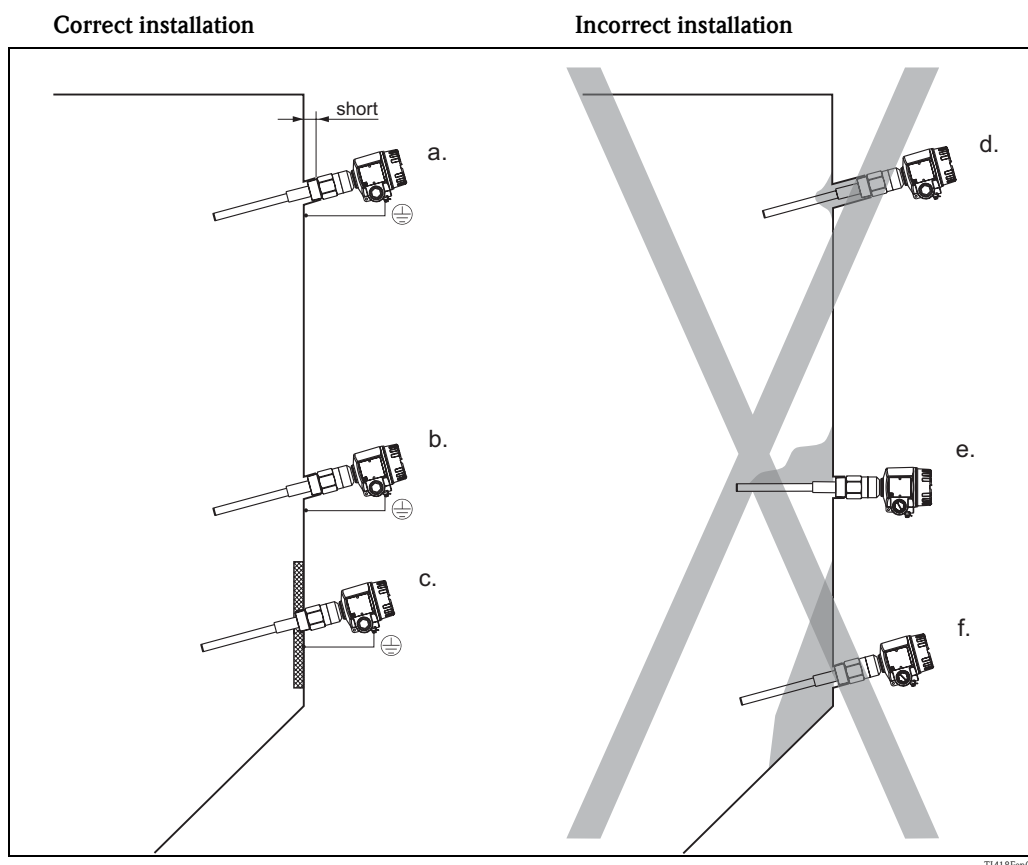


Correct installation

- a. For maximum point level detection, a short threaded coupling is used.
- b. For minimum point level detection, a short threaded coupling is used.
- c. In the event of light buildup on the silo wall, the threaded coupling is welded internally. The probe tip points slightly downwards so that bulk solids slide off more easily.

Incorrect installation

- d. The threaded coupling is too long. This may cause material to settle inside and result in error switching.
- e. Horizontal mounting means a risk of error switching in the event of heavy buildup on the silo wall. In this case, the Solicap M FTI55 (rod probe) with inactive length is recommended.
- f. In areas where product buildup occurs, the device cannot detect if the silo is "empty". In this case, the FTI56 (rope probe) should be installed from above.


In this example, the grounded steel plate forms the counter electrode.
Heat insulation prevents condensation and therefore buildup on the steel plate.

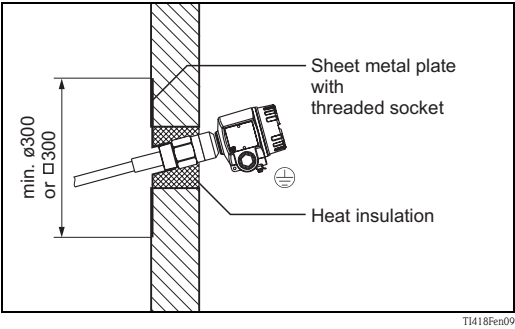

In a silo with concrete walls

When installing in a silo made of plastic, a sheet metal plate must be attached to the exterior of the silo as a counter electrode.
This plate can be either square or round.

- Dimensions in the case of a thin silo wall with a low dielectric constant:
approx. 0.5 m along each side or $\varnothing 0.5$ m;
- Dimensions in the case of a thicker silo wall or wall with a higher dielectric constant:
approx. 0.7 m along each side or $\varnothing 0.7$ m.

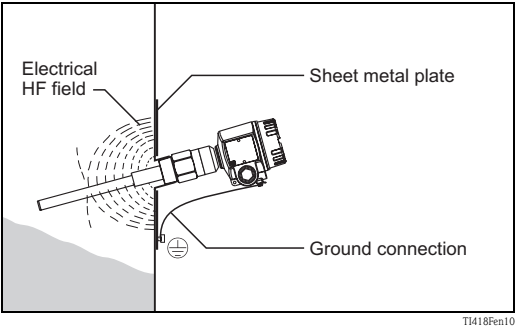

In a silo with plastic walls

Probe length and minimum coverage




Note!

- When selecting the probe length, pay attention to the dependency between the relative dielectric constant ϵ_r and the minimum amount the probe rod needs to be covered (see Table).
- For probe length tolerances see → 26.
- To ensure problem-free operation, it is important that the difference in capacitance between the covered and uncovered parts of the probe is at least 5 pF.
- If you do not know the dielectric constant of the material, contact us for advice.

Product properties, relative dielectric constant ϵ_r	* Minimum coverage TI418F12
Electrically conductive	25 mm
Nonconductive	
$\epsilon_r > 10$	100 mm
$\epsilon_r > 5$ to 10	200 mm
$\epsilon_r > 2$ to 5	500 mm

Preparing to install rope probes FTI56

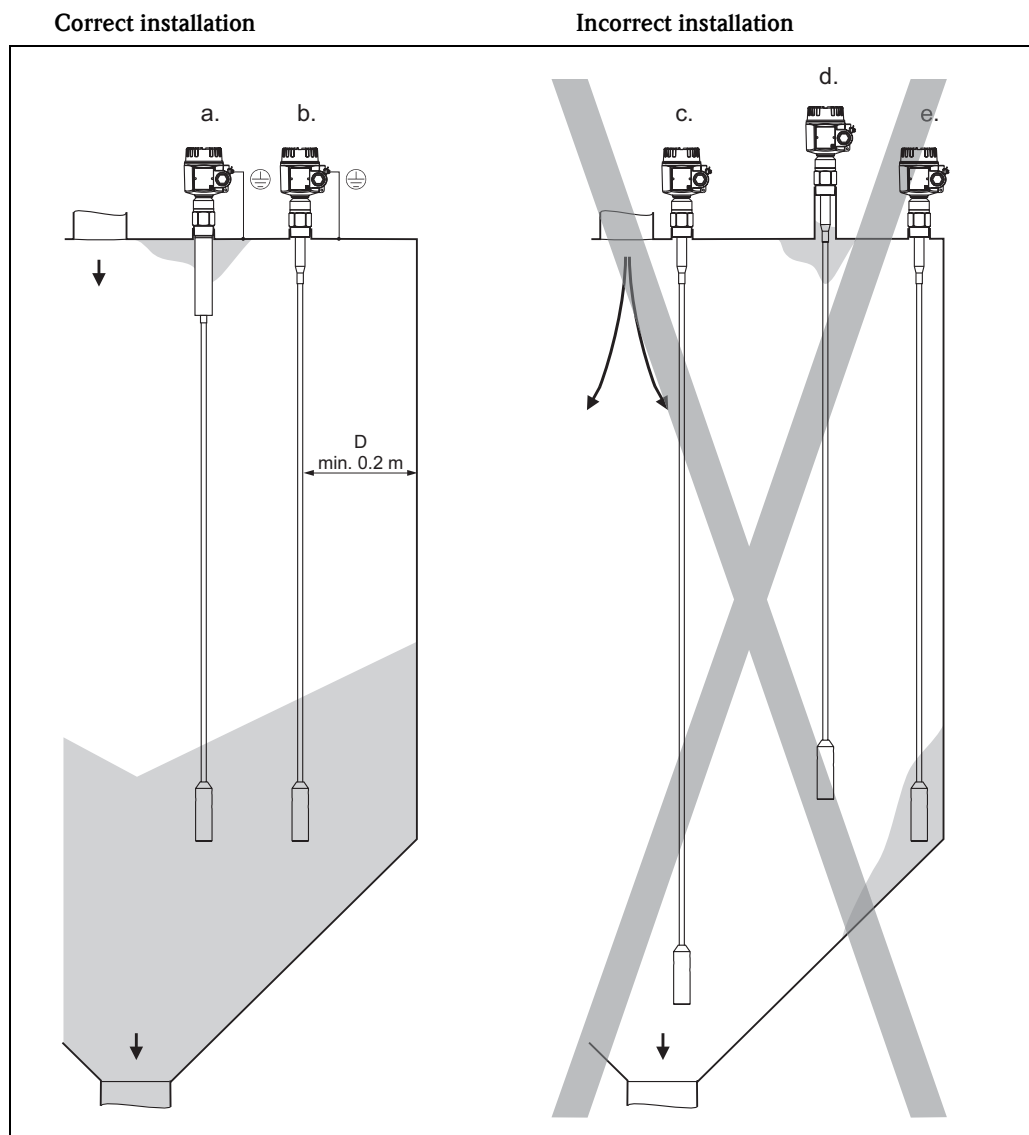

In a silo with metal walls

Distance D between the probe and the wall approx. 10 to 25 % of the silo diameter

Correct installation

- Solicap M FTI55, FTI56 with inactive length in the event of condensation and material buildup on the silo roof.
- At the correct distance from the silo wall, the material inlet and the material outlet. Close to the wall, for reliable switching in the case of a low dielectric constant (not for pneumatic filling). For pneumatic filling, the distance from the probe to the wall should not be too short, as the probe may swing.

Incorrect installation

- If too close to the material inlet, inflowing bulk solids may damage the sensor. If close to the center of the material outflow, high tensile forces at this point may cause the probe to break off or subject the silo roof to excessive strain.
- The threaded coupling is too long. This may cause condensation and dust to settle inside which may result in error switching.
- If too close to the silo wall, the probe may swing slightly against the wall or come in contact with buildup. This can result in error switching.

Silo roof

Ensure that the silo roof is of a sufficiently stable construction.

High tensile forces may occur when material is being extracted, particularly in the case of heavy and powdery bulk solids which have a tendency to form buildup.

Coarse-grained bulk solids

In silos with extremely coarse-grained or extremely abrasive bulk solids, the use of a Solicap M FTI55 or FTI56 is recommended only for maximum detection.

Distance between the rope probes

To rule out mutual probe interference, you must maintain a minimum distance of 0.5 m between the rope probes. This also applies if you are installing several Solicap M units in adjacent silos with nonconductive walls.

In the event of condensation:

Use the Solicap M with inactive length.


The inactive length (A) prevents moisture and buildup forming between the active part of the probe and the silo roof.

Or:

To reduce the effects of condensation (B) and buildup, the threaded coupling (length: max. 25 mm) must project into the silo.

Heat insulation reduces condensation and therefore buildup on the steel plate.


A

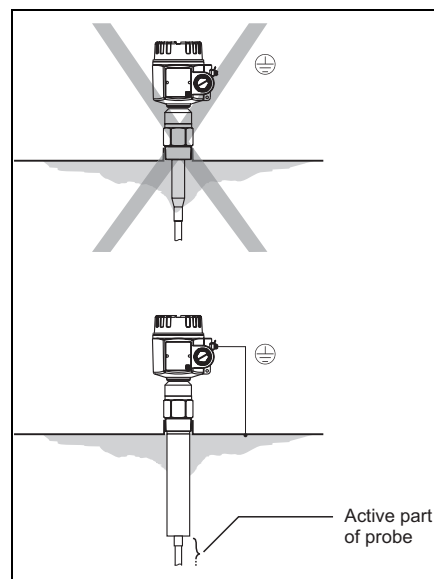

Silo with walls that conduct electricity

TI418Fen15

B

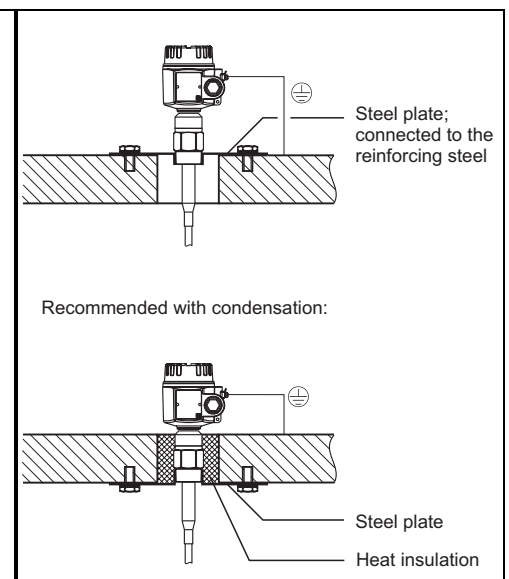


Silo with concrete walls

TI418Fen14

Installation in the event of buildup


If buildup on the probe rod can be expected when operating the measuring system, the active buildup compensation function prevents the measurement result from becoming distorted. No cleaning work has to be performed on the probe rod.

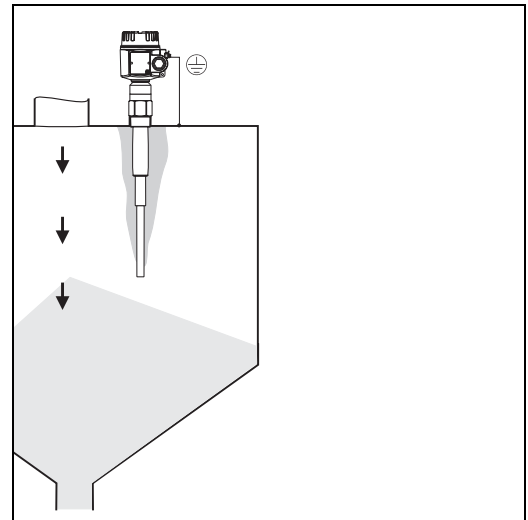

BA300Fxx020

Installation in plastic tanks


When installing in a silo made of plastic, a counter electrode must be mounted on the silo exterior at the same height as the tensioning weight. The length of the edge of the counter electrode should be approximately the same length as the distance between the tensioning weight and the silo wall.

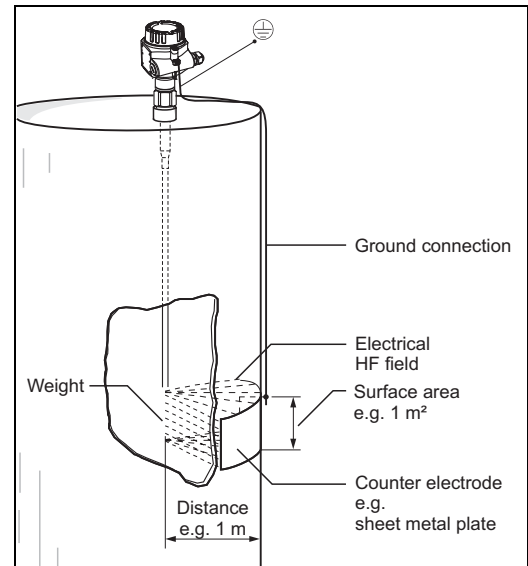

TI418Pen16

In a silo with plastic walls

Range of sensor lengths

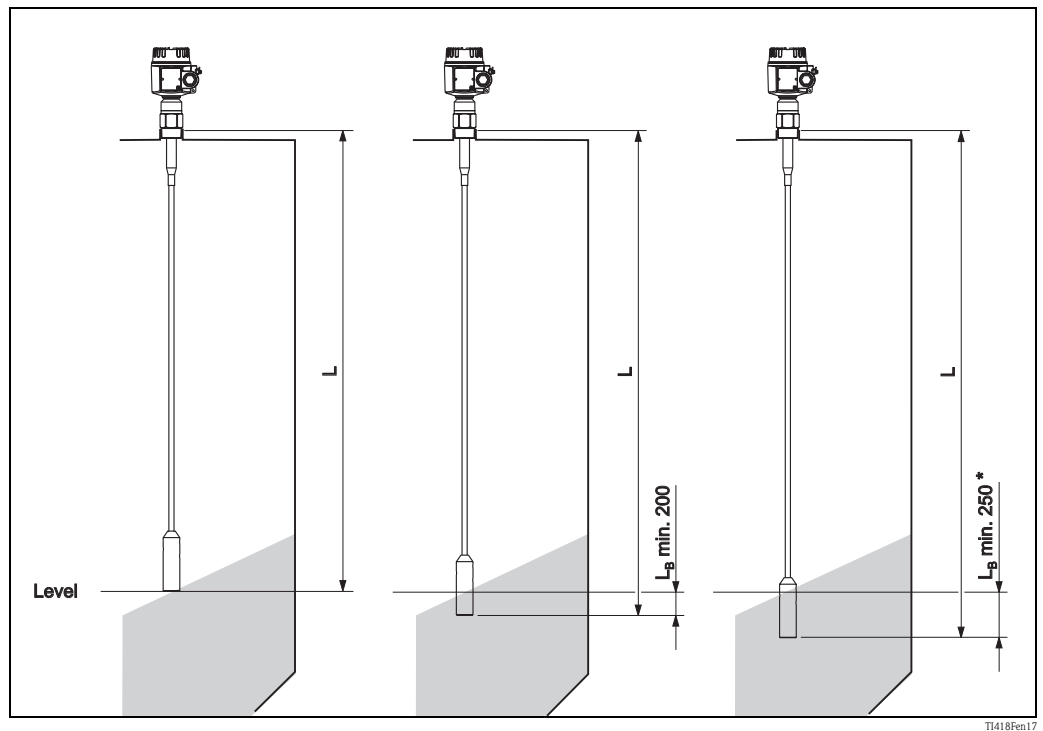

Electrically conductive
bulk solids
(e.g. coal)

Bulk solids with high
dielectric constant
(e.g. rock salt)

Bulk solids with low
dielectric constant
(e.g. dried grain)

* L_B (covered length):

For nonconductive bulk solids with a low dielectric constant, the rope probe must be approx. 5 % (but no less than 250 mm) longer than the distance between the tank roof and the required point level.

Shortening the probe

Rod probe:

The partially insulated version can be shortened at a later stage by the user.


Rope probe:

Both versions (partially and fully insulated) may be shortened at a later stage.

Probe with separate housing



- Note!
- For information on how to order, see also "Ordering information" from → 44 under "Probe design".
 - The maximum connection length between the probe and the separate housing is 6 m (L4).
When ordering a Solicap M with a separate housing, the desired length must be specified.
 - If the connecting cable is to be shortened or passed through a wall, it must be separated from the process connection. See also → 16 (extension heights).
 - The cable has a bending radius of $r \geq 100$ mm. This must be observed as a minimum.

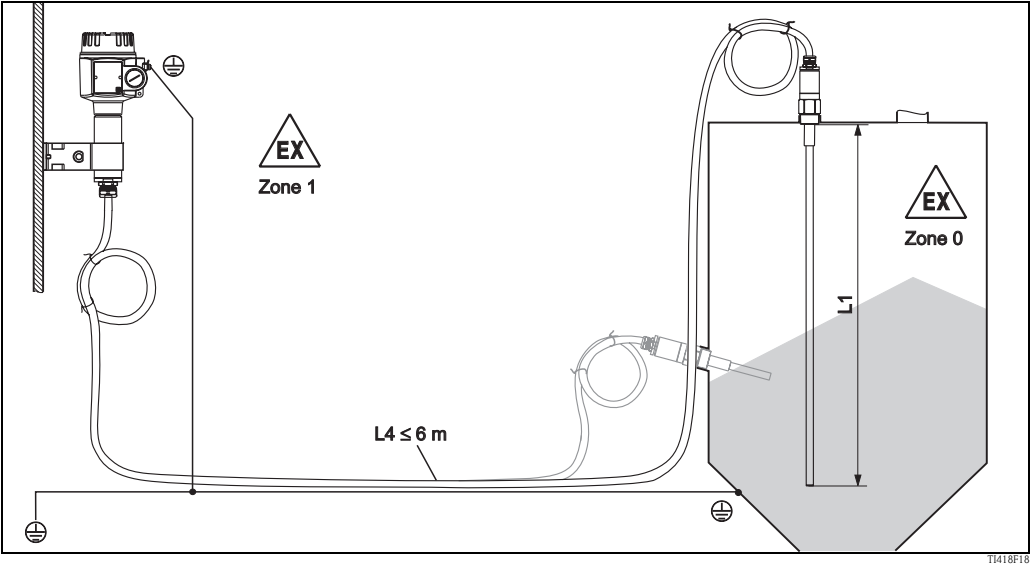


Rod length L1 max. 4 m
Rope length L1 max. 19.7 m (the maximum total length of L1 + L4 should not exceed 20 m.)

Extension heights

Housing side: wall mounting

Housing side: pipe mounting

Sensor side

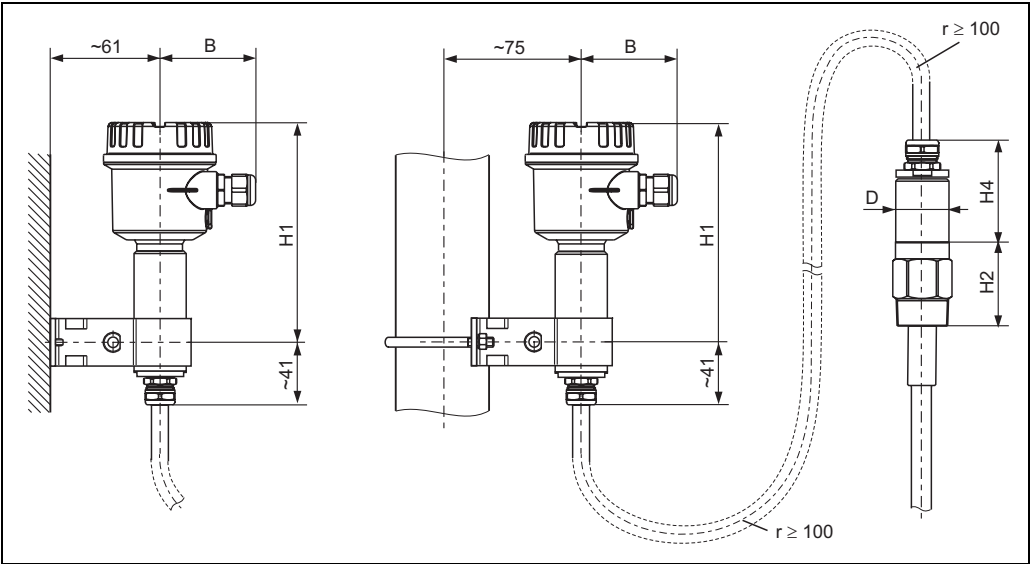

		Polyester housing F16	Stainless steel housing F15	Aluminum housing F17
B	-	76	64	65
H1	-	172	166	177
D	50	-	-	-
H4	62	-	-	-



Note!


- Connecting cable: $\varnothing 10.5$ mm
- Outer jacket: silicone, notch-resistant

Wall holder unit




Note!

- The wall holder unit is part of the scope of supply.
- The wall holder unit has to be screwed to the separate housing before you can use it as a drilling template. The distance between the holes is reduced by screwing it to the separate housing.

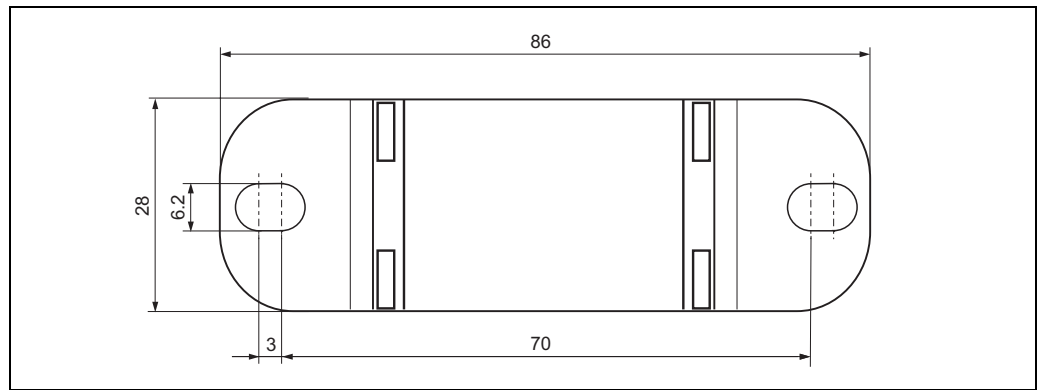

TI418F20

Temperature-derating separate housing

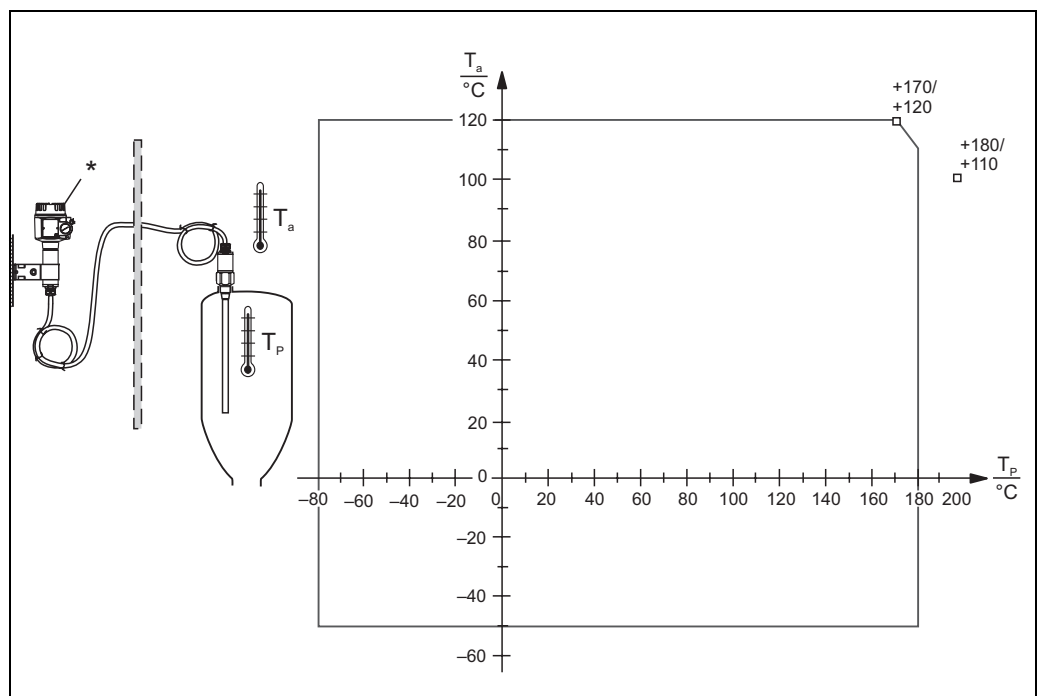

BA300Fxx021

T_a : ambient temperature

T_P : process temperature

* temperature at separate housing ≤ 70 °C



Note!

The maximum connection length between the probe and the separate housing is 6 m (L4). When ordering a device with a separate housing, the desired length must be specified.

If the connecting cable is to be shortened or passed through a wall, it must be separated from the process connection. See "Documentation" => "Operating Instructions" on → 49.

Operating conditions: Environment

Ambient temperature range	■ Ambient temperature of the transmitter (note derating, see → 19): □ –50 to +70 °C □ –40 to +70 °C (with F16 housing) ■ A weather protection cover should be used when operating outdoors in strong sunlight. For further information on the weather protection cover, see → 48.
----------------------------------	--

Storage temperature	–50 to +85 °C
----------------------------	---------------

Climate class	DIN EN 60068-2-38/IEC 68-2-38: test Z/AD
----------------------	--

Degree of protection

	IP66*	IP67*	IP68*	NEMA4X**
Polyester housing F16	X	X	–	X
Stainless steel housing F15	X	X	–	X
Aluminum housing F17	X	X	–	X
Aluminum housing F13 with gas-tight process seal	X	–	X***	X
Aluminum housing T13 with gas-tight process seal and separate connection compartment (EEx d)	X	–	X***	X
Separate housing	X	–	X***	X

* As per EN60529

** As per NEMA 250

*** Only with M20 cable entry or G1/2 thread

Vibration resistance	DIN EN 60068-2-64/IEC 68-2-64: 20 Hz– 2000 Hz; 0.01 g ² /Hz
-----------------------------	--

Cleaning	Housing: When cleaning, make sure that the cleaning agent used does not corrode the housing surface or the seals.
-----------------	---

Probe:
Depending on the application, buildup (contamination and soiling) can form on the probe rod. A high degree of material buildup can affect the measurement result. If the medium tends to create a high degree of buildup, regular cleaning is recommended. When cleaning, it is important to make sure that the insulation of the probe rod is not damaged. If cleaning agents are used make sure the material is resistant to them!

Electromagnetic compatibility (EMC)	■ Interference emission to EN 61326, Electrical Equipment Class B Interference immunity in accordance with EN 61326, Appendix A (Industrial) and NAMUR Recommendation NE 21 (EMC) ■ A usual commercial instrument cable can be used.
--	---

Shock resistance	DIN EN 60068-2-27/IEC 68-2-27: 30g acceleration
-------------------------	---

Operating conditions: Process

Process temperature range




Note!


- The following process temperature ranges only apply for standard applications outside hazardous areas.
- Regulations for use in hazardous areas are provided in the Supplementary Documentation XA389F/00.

Permitted ambient temperature T_a at the housing depending on the process temperature T_p in the tank.

Rod probe FTI55

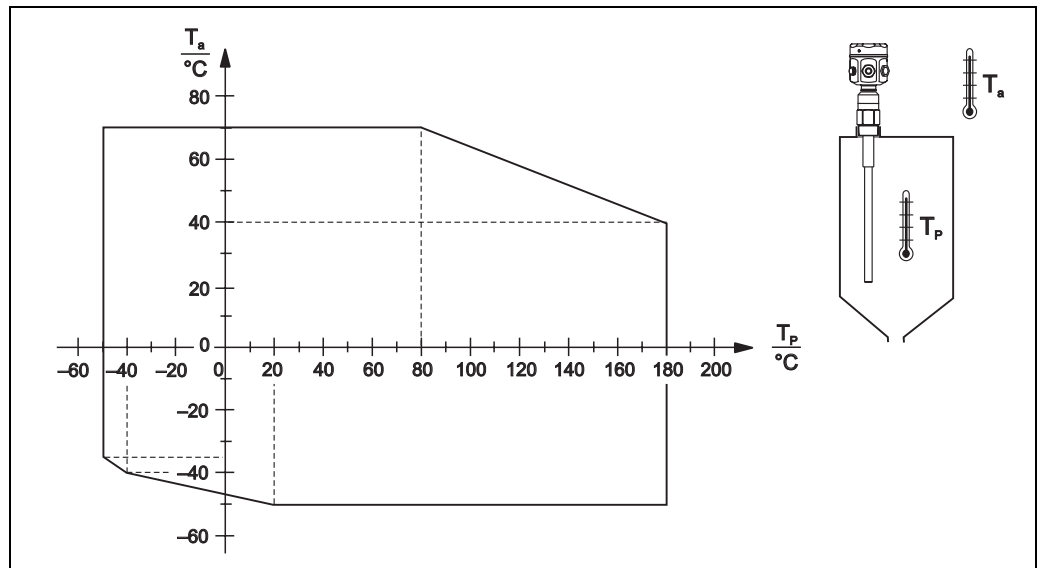

Partially insulated (PPS):

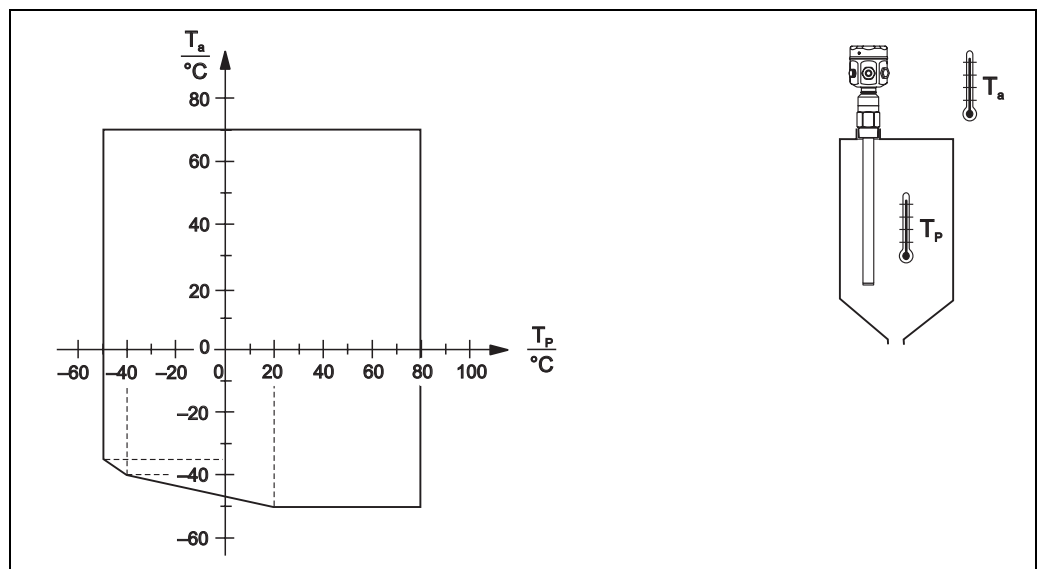


Fully insulated (PE):



Note!


Restriction to T_a -40 °C for polyester housing F16.

Rope probe FTI56

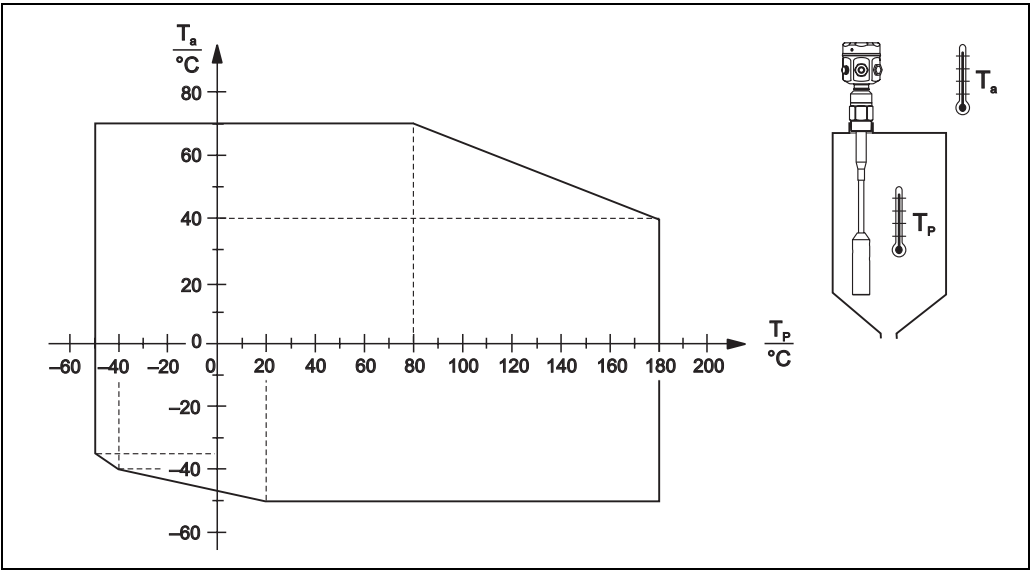

TI418F02

Partially insulated (PTFE):

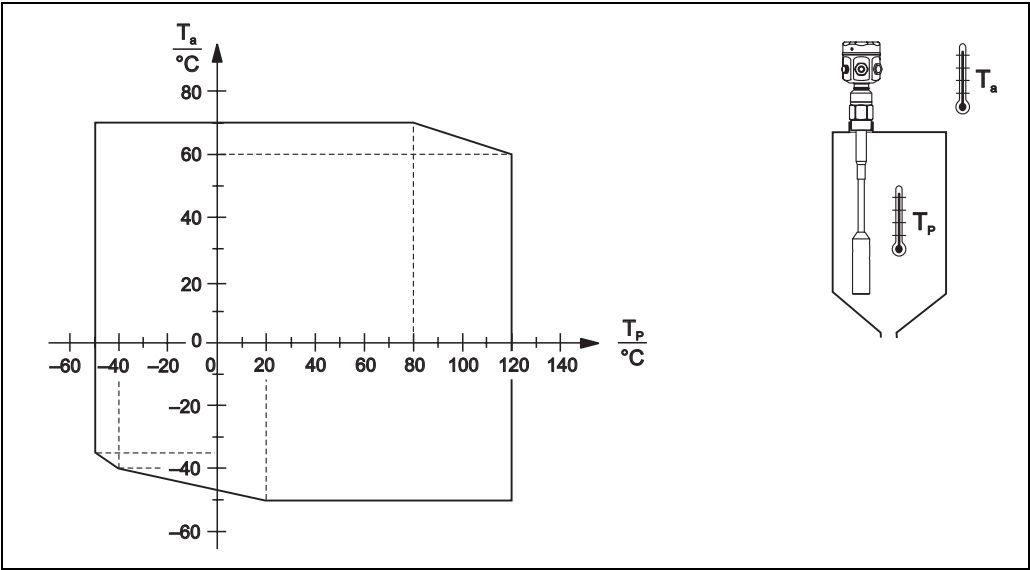

TI418F03

Fully insulated (PA):


Process pressure and temperature derating



Note!


- The lowest value from the derating curves of the device and the selected flange applies.
- In the case of flange process connections, the maximum pressure is limited by the nominal pressure of the flange.
- See also "Process connections" on → [25](#).

Rod probe FTI55

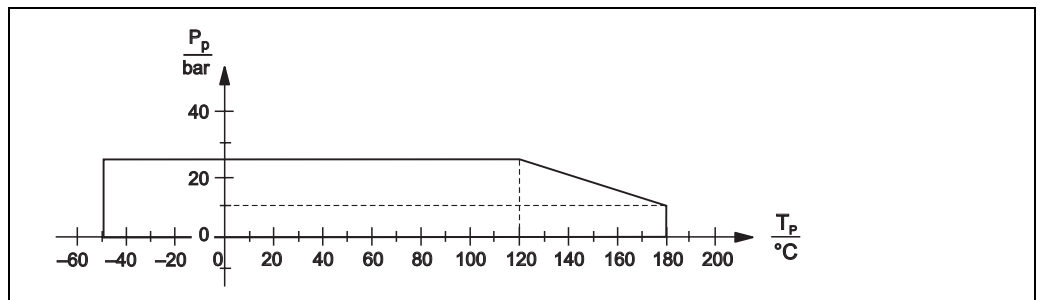

TI418F64


Partially insulated (PPS):

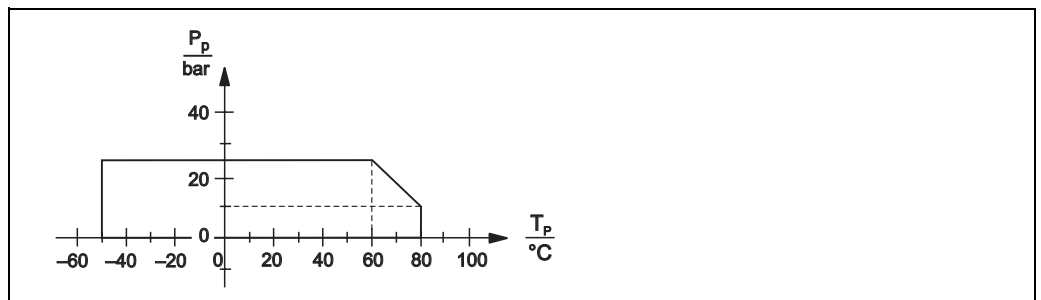

TI418F65


Fully insulated (PE):

Rope probe FTI56

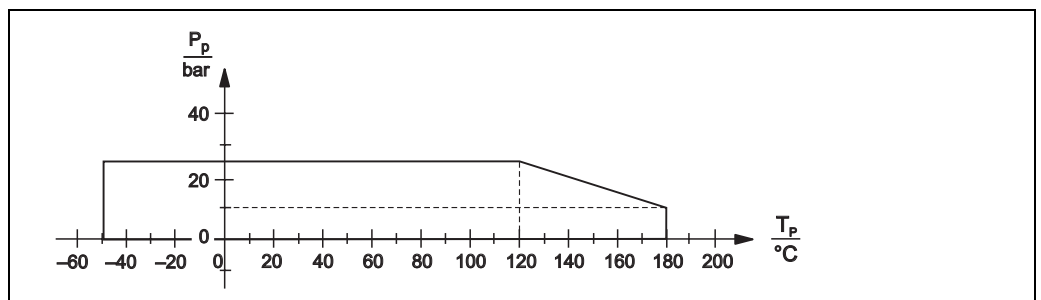

TI418F64

Partially insulated (PTFE):

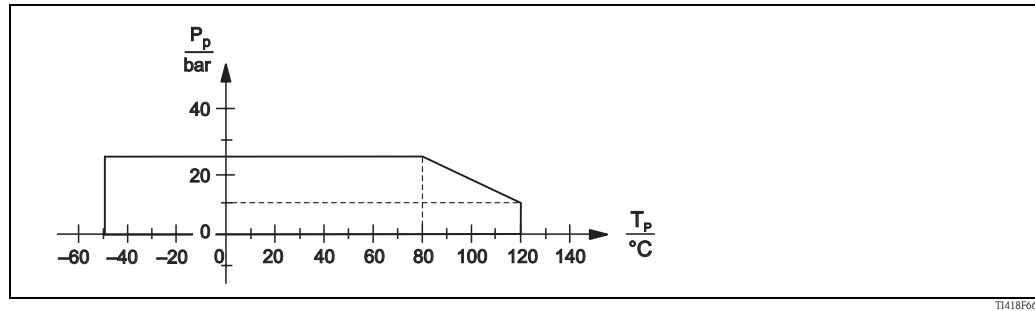

TI418F66

Fully insulated (PA):

Process pressure limits

–1 to 25 bar

(observe dependencies => process connections from → 25 and operating conditions: process from → 19.)

The lowest value from the derating curves of the device and the selected flange applies.

Please refer to the following standards for the pressure values permitted at higher temperatures:

- pR EN 1092-1: 2005 Table, Appendix G2

With regard to its resistance/temperature property, the material 1.4435 is identical to 1.4404 (AISI 316L) which is grouped under 13E0 in EN 1092-1 Tab. 18. The chemical makeup of the two materials can be identical.

- ASME B 16.5a - 1998 Tab. 2-2.2 F316
- ASME B 16.5a - 1998 Tab. 2.3.8 N10276
- JIS B 2220

State of aggregation


See → 4, "Application examples"

Mechanical construction




Note!
All dimensions in mm.


Overview

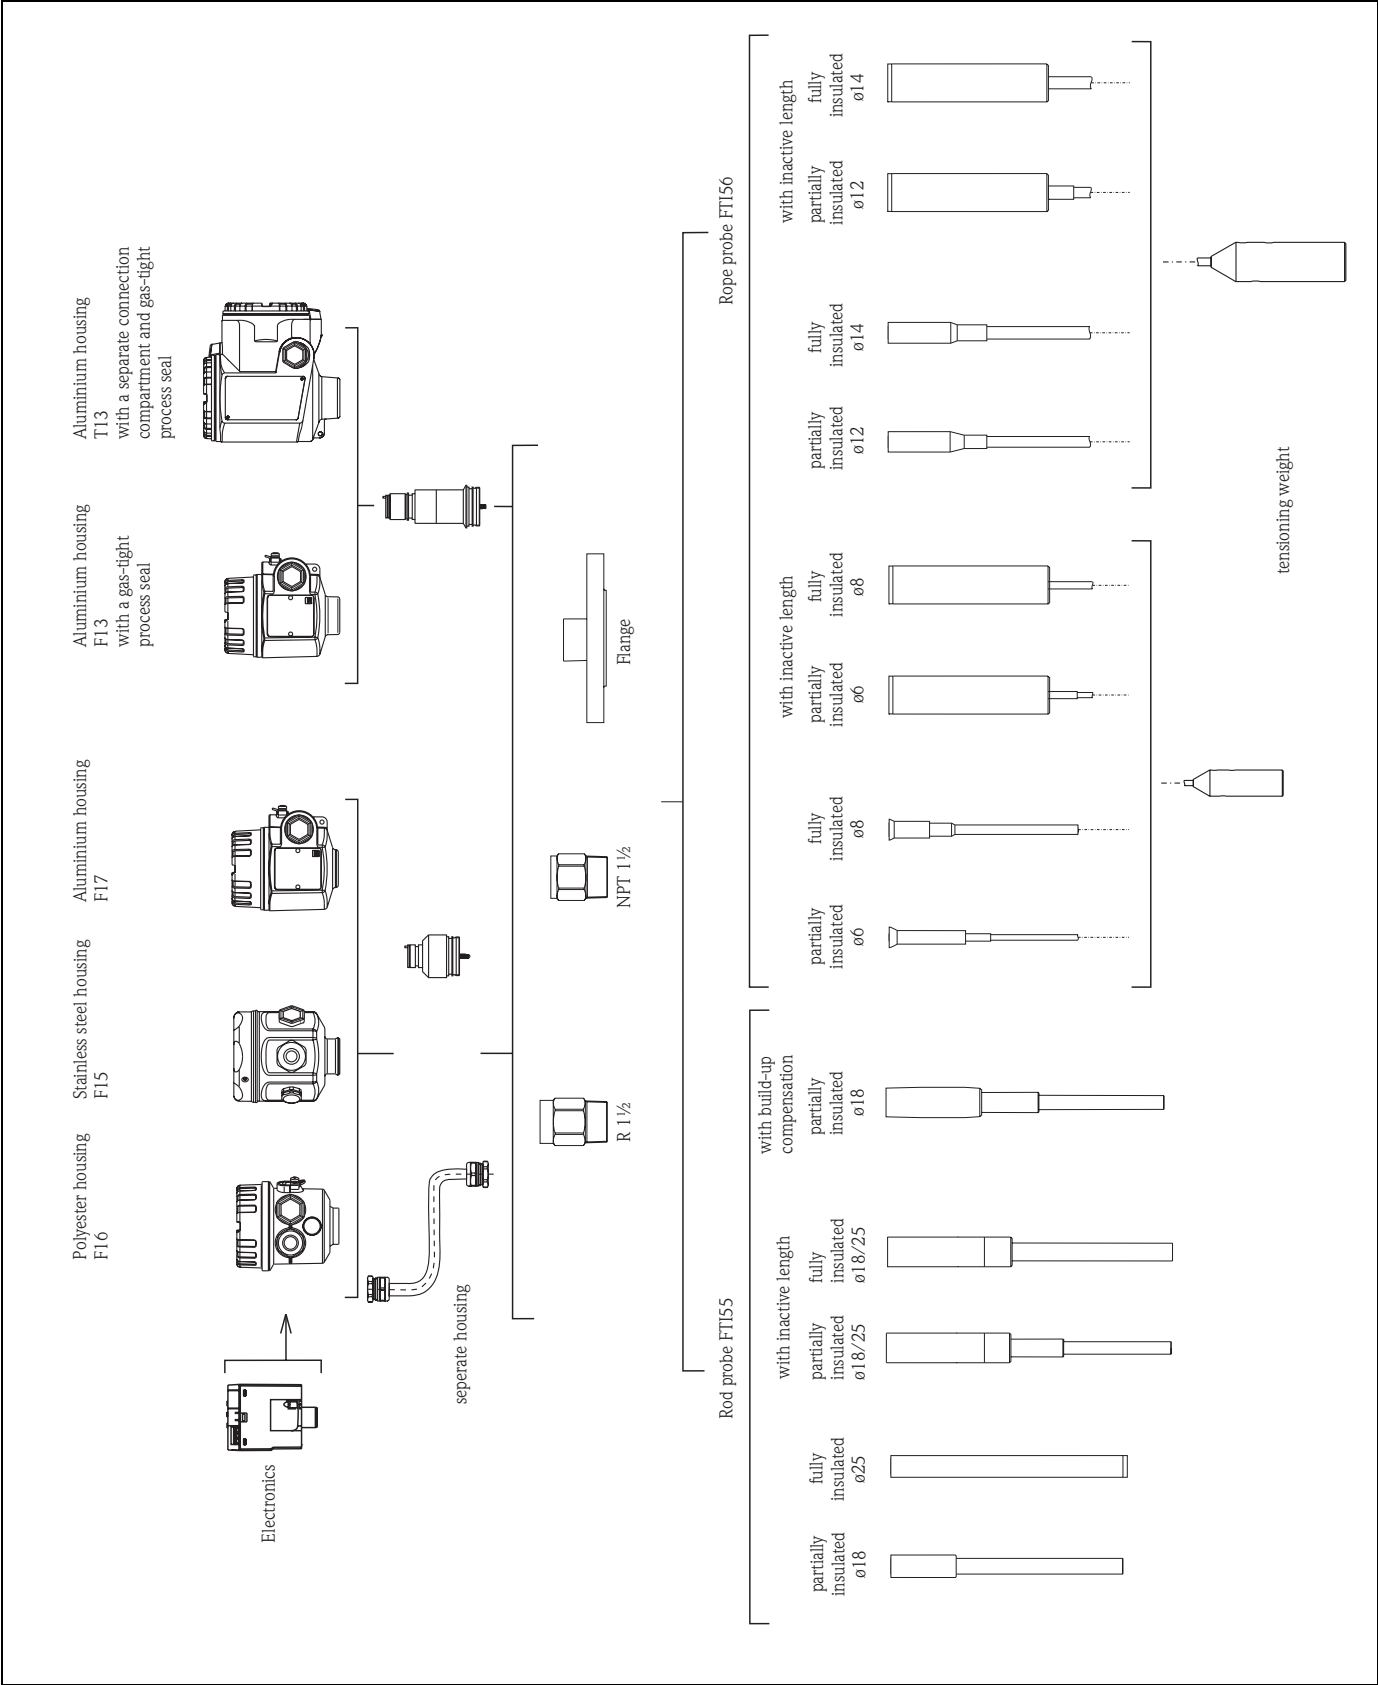


T1418Fen24

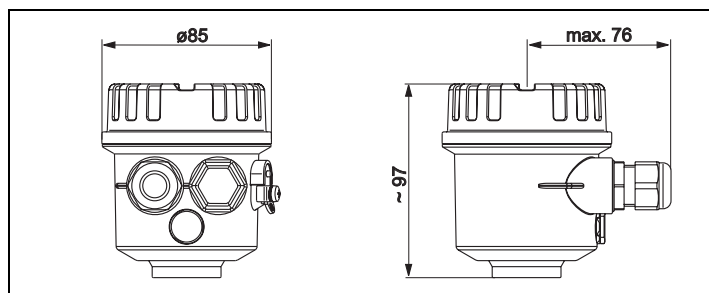Housing*Polyester housing F16*


TI418F25

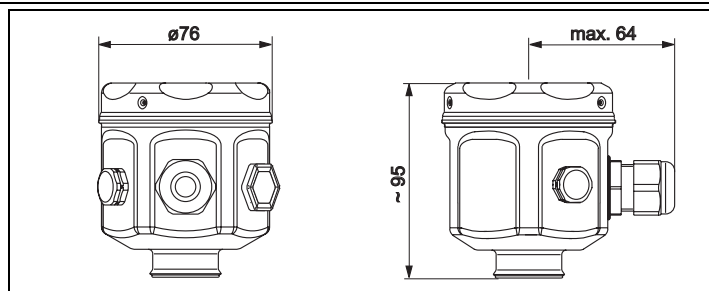Stainless steel housing F15


TI418F26

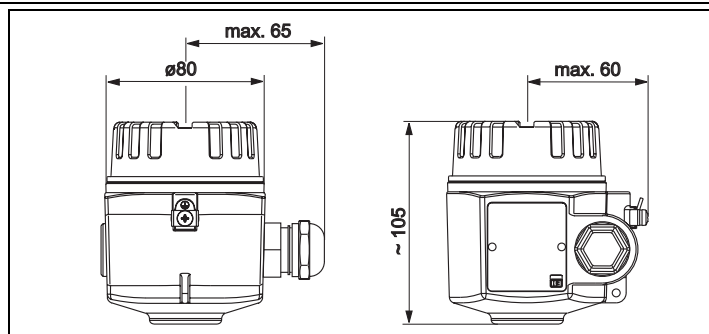Aluminum housing F17

TI418F27





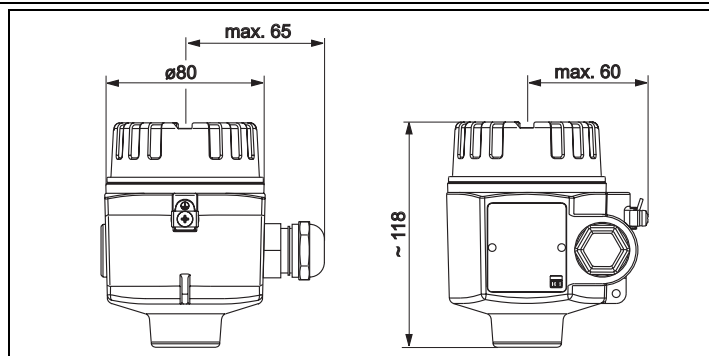
*Aluminum housing F13
with gas-tight process seal*

TI418F28

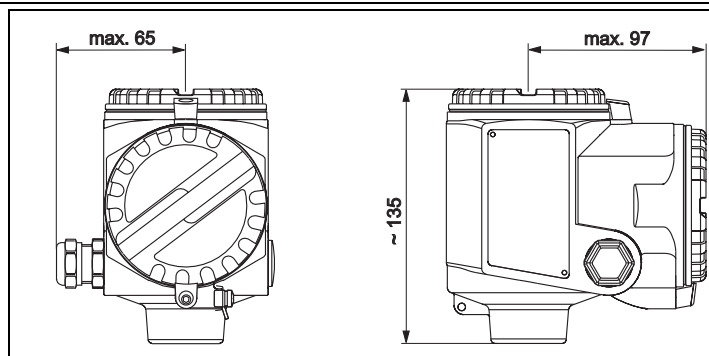*Aluminum housing T13
with separate connection
compartment and gas-tight
process seal*


TI418F29

Housing heights with adapter

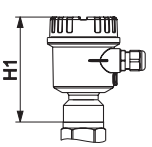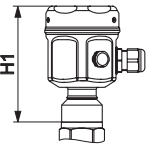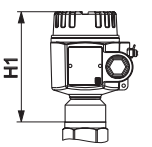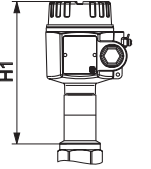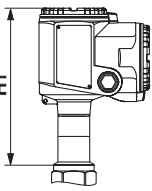	Polyester housing F16	Stainless steel housing F15	Aluminum housing F17	Aluminum housing F13*	Aluminum housing with separate connection compartment T13*
	 TI418F30	 TI418F31	 TI418F32	 TI418F33	 TI418F34
Order code	2	1	3	4	5
FTI55, FTI56					
H1	125	121	131	177	194

* Housing with gas-tight process seal

Process connections and flanges

	Thread: R 1½	Thread: NPT 1½	Flanges
	 TI418Fen35 (DIN EN 10226-1)	 TI418Fen36 (ANSI B 1.20.1)	 TI418F37 (EN1092-1) (ANSI B 16.5) (JIS B2220)
Order code/material	RVJ / 316L RV1 / steel	RGJ / 316L RG1 / steel	
Pressures up to	25 bars	25 bars	Depends on flange max. 25 bar

Rod probes FTI55

Note!

Total length of the probe from the start of the thread: $L = L1 + L3$
 (+ 125 mm with active buildup compensation)

	Rod probe partially insulated	Rod probe fully insulated	Rod probe with inactive length partially/fully insulated	Rod probe with active buildup compensation partially insulated
H2	77	77	66	92
H3	25	25	25	25
Across flats (AF)	50	50	50	50
Total length (L)	200 to 4000	200 to 4000	300 to 6000	225 to 4000
Active rod length (L1)	200 to 4000	200 to 4000	200 to 4000	200 to 4000
Inactive rod length (L3)	-	-	200 to 2000	-
ø Inactive length	-	-	43	-
Length of partial insulation (L2)	75	-	75 / -	75
Probe rod diameter (with insulation)	18 (21.5)	18 (21.5)	18 (21.5)	18 (21.5)
ø Active build-up compensation/length	- / -	- / -	- / -	36/ 125
Lateral loading capacity (Nm) at 20 °C	300	300	300	200
Maximum process temperature (°C)	180	80	180/80	180
For use in mounting nozzles	-	-	X	-
In the event of condensate on tank ceiling	-	-	X	X

TI418Fen39

X = recommended

Length tolerance

up to 1 m: 0 to -5 mm

> 1 m to 3 m: 0 to -10 mm

> 3 m to 6 m: 0 to -20 mm

Rope probes FTI56



Note!

Total length of probe from start of thread: $L = L1 + L3$

	Rod probe Partially insulated rope		Rod probe Fully insulated rope		Rope probe with inactive length Partially insulated rope		Rope probe with inactive length Fully insulated rope	
	TT418F38						TT418Fen40	
H2	66		66		66		66	
H3	25		25		25		25	
Across flats (AF)	50		50		50		50	
Total length (L)	500 to 20000		500 to 20000		700 to 20000		700 to 20000	
Active rope length (L1)	500 to 20000		500 to 20000		500 to 19800		500 to 19800	
Length of partial insulation (L2)*	500		-		500		-	
Inactive length (L3)	-		-		200 to 2000		200 to 2000	
ø Inactive length	-		-		43		43	
Probe rope diameter (with insulation)	6 (7)	12 (14)	6 (7)	12 (14)	6 (7)	12 (14)	6 (7)	12 (14)
ø Tensioning weight**	30	40	30	40	30	40	30	40
Length of tensioning weight (lg)	150	250	150	250	150	250	150	250
Tensile loading capacity (kN) of probe rope at 20 °C	30	60	30	60	30	60	30	60
Maximum process temperature (°C)	180		120		180		120	
For use in mounting nozzles	-		-		X		X	
In the event of condensate on tank ceiling	-		-		X		X	

X = recommended

* The length of the partial insulation extends, at maximum, to the tensioning weight.

** The tensioning weight is always uninsulated.

Length tolerance

up to 1 m: 0 to -10 mm > 1 m to 3 m: 0 to -20 mm > 3 m to 6 m: 0 to -30 mm > 6 m to 20 m: 0 to -40 mm

Material	Housing ■ Aluminum housing F17, F13, T13: GD–Al Si 10 Mg, DIN 1725, with plastic coating (blue/gray) ■ Polyester housing F16: PBT–FR fiberglass reinforced polyester (blue/gray) ■ Stainless steel housing F15: corrosion-resistant steel 316L (14404), uninsulated Housing cover and seals ■ Aluminum housing F17, F13, T13: EN-AC-AISi10Mg, plastic-coated cover seal: EPDM ■ Polyester housing F16: Cover made of PBT-FR or cover with sight glass made of PA12 Cover seal: EPDM ■ Stainless steel housing F15: AISI 316L Cover seal: silicone Probe material ■ Process connection, tensioning weight for rope probe: 1.4404 (316L) or steel ■ Inactive length: 1.4404 (316L) ■ Probe rope partially insulated: PTFE, 1.4401 (AISI 316) ■ Probe rope fully insulated: PA, galvanized steel ■ Probe rod partially insulated: PPS, 1.4404 (316L) ■ Probe rod fully insulated: PE, galvanized steel
Weight	■ with F15, F16, F17 or F13 housing approx. 4.0 kg + flange weight or process connection + probe rod 2.0 kg/m (for ø18 mm probe rod) or + probe rope 0.180 kg/m (for ø6 mm rope probes) or + probe rope 0.550 kg/m (for ø12 mm rope probes) ■ with T13 housing approx. 4.5 kg + flange weight or process connection + probe rod 2.0 kg/m (for ø18 mm probe rod) or + probe rope 0.180 kg/m (for ø6 mm rope probes) or + probe rope 0.550 kg/m (for ø12 mm rope probes)

Input

Measured variable	Measurement of the change in capacitance between the probe rod and the tank wall, depending on the level of the bulk solids.
Measuring range (valid for all FEI5x)	■ Measuring frequency: 500 kHz ■ Span: $\Delta C = 5$ to 1600 pF $\Delta C = 5$ to 500 pF (with FEI58) ■ Final capacitance: $C_E = \text{max. } 1600 \text{ pF}$ ■ Adjustable initial capacitance: $C_A = 5$ to 500 pF (range 1 = factory setting) $C_A = 5$ to 1600 pF (range 2; not with FEI58)
Input signal	Probe covered $\Rightarrow$ high capacitance Probe not covered $\Rightarrow$ low capacitance

Measuring conditions




Note!

- When installing in a nozzle, use inactive length (L3).
- To control a screw conveyor (Δs mode), rod probes and rope probes can be used. The on-value and off-value are determined by the empty and full calibration;
 - Partially insulated probes are only suitable for nonconductive bulk solids.

$DK > 10$	Measuring range up to 4 m
$5 < DK < 10$	Measuring range up to 12 m
$2 < DK < 5$	Measuring range up to 20 m

- The minimum capacitance change for point level detection must be $\geq 5 \text{ pF}$.

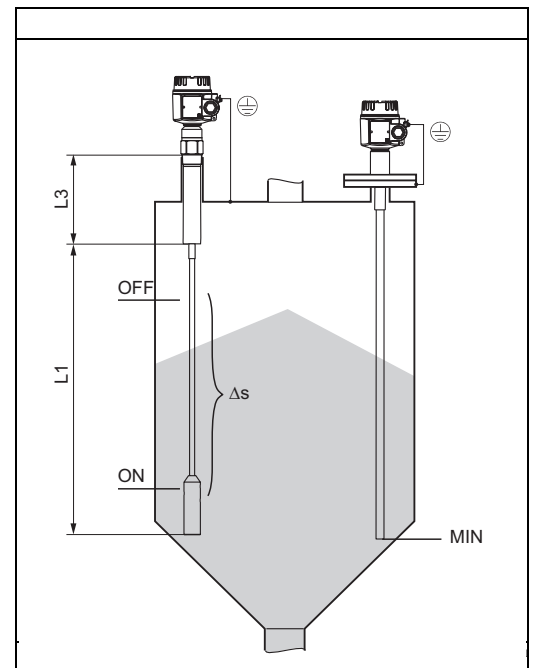

TI418F41

Minimum probe length for nonconductive media ($< 1 \mu\text{s/cm}$)

$$l_{\min} = \Delta C_{\min} / (C_s \cdot [\epsilon_r - 1])$$

$l_{\min}$ = Minimum probe length

$\Delta C_{\min}$ = 5 pF

C_s = Probe capacitance in air

ϵ_r = Dielectric constant e.g. dried grain = 3.0

Output

Galvanic isolation	FEI51, FEI52 between rod probe and power supply FEI54: between rod probe, power supply and load FEI53, FEI55, FEI57S, FEI58 see connected switching device (functional galvanic isolation in the electronic insert)
Switch behavior	Binary or Δ s operation (pump control, not with FEI58)
Switch-on behavior	When the power supply is switched on, the switching status of the outputs corresponds to the signal on alarm. The correct switch condition is reached after max. 3 seconds.
Fail-safe mode	Minimum/maximum quiescent current safety can be switched at the electronic insert (for FEI53 and FEI57S only at Nivotester FTCxxx) MAX = minimum safety: The output switches safety-oriented when the probe is uncovered (signal on alarm). For use for dry running protection and pump protection for example MAX = maximum safety: The output switches safety-oriented when the probe is covered (signal on alarm). For use with overflow protection for example
Switching delay	FEI51, FEI52, FEI54, FEI55 Can be adjusted incrementally at the electronic insert: 0.3 to 10 s FEI53, FEI57S Depends on the connected Nivotester (transmitter): FTC325, FTC625, FTC470Z or FTC471Z FEI58 Can be adjusted alternately at the electronic insert: 1 s / 5 s

Electronic insert FEI51 (AC 2-wire)



Note!
Connect in series with an external load.


Power supply
Supply voltage: 19 to 253 V AC
Power consumption: < 1.5 W
Residual current consumption: < 3.8 mA
Short-circuit protection
FEI51 overvoltage protection: overvoltage category II

Electrical connection

Always connect in series with a load!
Check the following:

- the residual current consumption in blocked state.
- that for low voltage:
 - the voltage drop across the load is such that the minimum terminal voltage at the electronic insert (19 V) when blocked is not undershot.
 - the voltage drop across the electronics when switched through is observed (up to 12 V).
- that a relay cannot de-energize with holding power below 1 mA.
If this is the case, a resistor should be connected parallel to the relay (RC module available on request).

When selecting the relay, pay attention to the holding power / rated power (see below: "Connectable load").

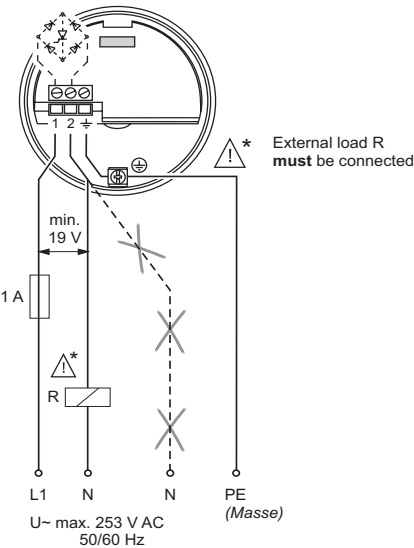

L00-FMI5xxxx-06-05-xx-en-071

Signal on alarm

Safety mode	Level	Output signal	LEDs gn gn rd gn gn ye
MAX		$L^+ \xrightarrow{I_L} 3$	
		$1 \xrightarrow{< 3,8 \text{ mA}} 3$	
MIN		$L^+ \xrightarrow{I_L} 3$	
		$1 \xrightarrow{< 3,8 \text{ mA}} 3$	
Maintenance required		$I_L / < 3,8 \text{ mA}$ $1 \xrightarrow{\phantom{< 3,8 \text{ mA}}} 3$	
Instrument failure		$< 3,8 \text{ mA}$ $1 \xrightarrow{\phantom{< 3,8 \text{ mA}}} 3$	

BA300Fen017

Output signal Output signal on power failure or in the event of damage to the sensor: < 3.8 mA

Connectable load

- For relays with a minimum holding power or rated power > 2.5 VA at 253 V AC (10 mA) or > 0.5 VA at 24 V AC (20 mA)
- Relays with a lower holding power or rated power can be operated by means of an RC module connected in parallel.
- For relays with a maximum holding power or rated power < 89 VA at 253 V AC or < 8.4 VA at 24 V AC
- Voltage drop across FEI51 max. 12 V
- Residual current with blocked thyristor max. 3.8 mA
- Load switched directly into the power supply circuit via the thyristor.

FEI52 electronic insert (DC PNP)

Power supply


Supply voltage: 10 to 55 V DC
Ripple: max. 1.7 V, 0...400 Hz
Current consumption: < 20 mA
Power consumption without load: max. 0.9 W
Power consumption with full load (350 mA): 1.6 W
Reverse polarity protection: yes
Separation voltage: 3.7 kV
FEI52 overvoltage protection: overvoltage category II

Electrical connection

Three-wire DC connection

Preferably in conjunction with programmable logic controllers (PLC),
DI modules in accordance with EN 61131-2.

Positive signal present at the switch output of the electronic system (PNP).

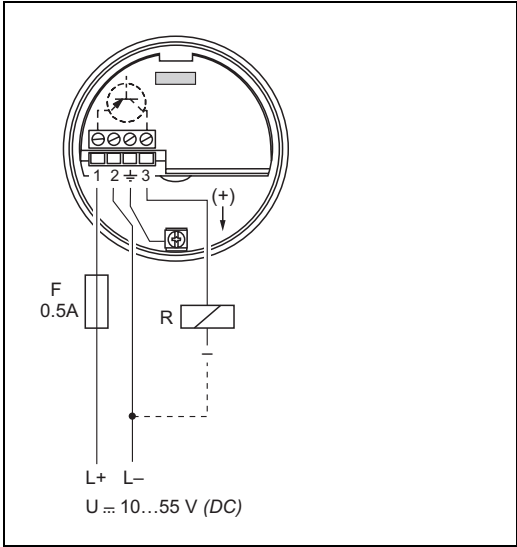

Output signal

Safety mode	Level	Output signal	LEDs gn gn rd gn gn ye
MAX		$L+ \xrightarrow{I_L} +$ 1 $\xrightarrow{I_L}$ 3	
		1 $\xrightarrow{I_R}$ 3	
MIN		$L+ \xrightarrow{I_L} +$ 1 $\xrightarrow{I_L}$ 3	
		1 $\xrightarrow{I_R}$ 3	
Maintenance required		1 $\xrightarrow{I_L / I_R}$ 3	
Instrument failure		1 $\xrightarrow{I_R}$ 3	

I_L = Load current
(switched through)
 I_R = Residual current
(blocked)

Lit
 Flashes
 Unlit

Signal on alarm

Output signal on power failure or in the event of device failure: $I_R < 100 \mu A$

- Connectable load**
- Load switched via transistor and separate PNP connection, max. 55 V
 - Load current max. 350 mA (cyclical overload and short-circuit protection)
 - Residual current < 100 μA (with transistor blocked)
 - Capacitance load max. 0.5 μF at 55 V; max. 1.0 μF at 24 V
 - Residual voltage < 3 V (for transistor switched through)

Electronic insert FEI53 (3-wire)

Power supply

Supply voltage: 14.5 V DC
Current consumption: < 15 mA
Power consumption: max. 230 mW
Reverse polarity protection: yes
Separation voltage: 0.5 kV

Electrical connection

Three-wire DC connection


3 to 12 V signal

For connecting to the switching unit, Nivotester FTC325 3-WIRE from Endress+Hauser.

Switching between minimum/maximum

Safety in the Nivotester FTC325 3-WIRE.

Point level adjustment directly at the Nivotester.

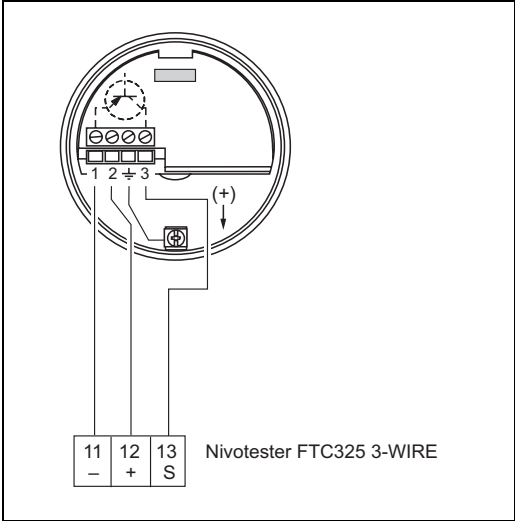

Output signal

Mode	Output signal	LEDs green red
Normal operation	3...12 V at terminal 3	 
Maintenance required *	3...12 V at terminal 3	 
Instrument failure	< 2,7 V at terminal 3	 

TI418Fen46

TI418F44

 Lit
 Flashes
 Unlit

Signal on alarm

Voltage at terminal 3 vis-à-vis terminal 1: < 2.7 V

Connectable load

- Floating relay contacts in the connected switching unit Nivotester FTC325 3-WIRE
- For the contact load capacity, refer to the technical data of the switching device.

FEI54 electronic insert (AC/DC with relay output)

Power supply

Supply voltage: 19 to 253 V AC, 50/60 Hz or 19 to 55 V DC
 Power consumption: max. 1.6 W
 Reverse polarity protection: yes
 Separation voltage: 3.7 kV
 FEI54 overvoltage protection: overvoltage category II


Electrical connection

Universal current connection with relay output (DPDT)

Power supply:
 Please note the different
 voltage ranges for AC and DC.

Output:
 When connecting an instrument with
 high inductance, provide a spark arrester
 to protect the relay contact.
 A fine-wire fuse (depending on the
 load connected) protects the relay
 contact on short-circuiting.
 Both relay contacts switch simultaneously.

* See below "Connectable load"

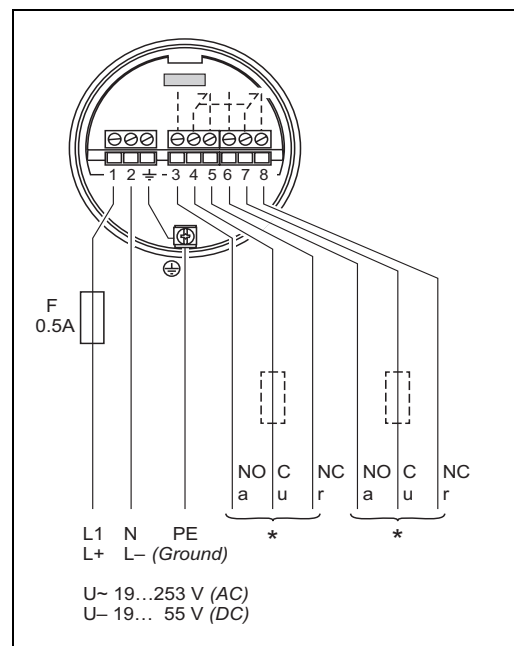

TI418F47

Output signal

Safety mode	Level	Output signal	LEDs
			gn gn rd gn gn ye
MAX			
MIN			
Maintenance required			
Instrument failure			

TI418F48

TI418F49

| Relay energized
 | Relay de-energized
 Lit
 Flashes
 Unlit

Signal on alarm

Output signal on power failure or in the event of device failure: relay de-energized


Connectable load

- Loads switched via 2 floating changeover contacts (DPDT)
- I~ max. 6 A, U~ max. 253 V; P~ max. 1500 VA at $\cos \varphi = 1$, P~ max. 750 VA at $\cos \varphi > 0.7$
- I- max. 6 A to 30 V, I- max. 0.2 A to 125 V
- The following applies when connecting a functional low-voltage circuit with double isolation as per IEC 1010: Sum of voltages of relay output and power supply max. 300 V

Electronic insert FEI55 (8/16 mA; SIL2/SIL3)

Power supply
Supply voltage: 11 to 36 V DC
Power consumption: < 600 mW
Reverse polarity protection: yes
Separation voltage: 0.5 kV

Electrical connection
Two-wire connection for separate switching unit
For connecting to programmable logic controllers (PLC), AI modules 4 to 20 mA in accordance with EN 61131-2.
The point level signal is sent via an output signal jump from 8 mA to 16 mA.

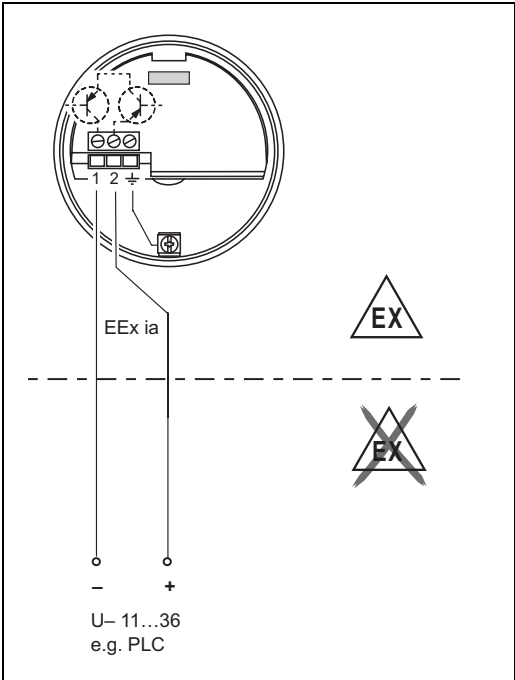

TI418Fen50

Output signal

Safety mode	Level	Output signal	LEDs gn gn rd gn gn ye
MAX		$\begin{matrix} + \\ 2 \end{matrix} \xrightarrow{\sim 16 \text{ mA}} 1$	
		$\begin{matrix} + \\ 2 \end{matrix} \xrightarrow{\sim 8 \text{ mA}} 1$	
MIN		$\begin{matrix} + \\ 2 \end{matrix} \xrightarrow{\sim 16 \text{ mA}} 1$	
		$\begin{matrix} + \\ 2 \end{matrix} \xrightarrow{\sim 8 \text{ mA}} 1$	
Maintenance required *		$\begin{matrix} + \\ 2 \end{matrix} \xrightarrow{8/16 \text{ mA}} 1$	
Instrument failure		$\begin{matrix} + \\ 2 \end{matrix} \xrightarrow{< 3.6 \text{ mA}} 1$	

TI418Fen51

TI418F44

$\sim 16 \text{ mA} = 16 \text{ mA} \pm 5 \%$
 $\sim 8 \text{ mA} = 8 \text{ mA} \pm 6 \%$

Lit
 Flashes
 Unlit

Signal on alarm Output signal on power failure or in the event of device failure: < 3.6 mA


Connectable load

- U = Connection DC voltage:
 - 11 to 36 V DC (non-hazardous area and Ex ia)
 - 14.4 to 30 V DC (Ex d)
- I_{max} = 16 mA

FEI57S electronic insert (PFM)

Power supply

Supply voltage:
9.5 to 12.5 VDC
Power consumption: < 150 mW
Reverse polarity protection: yes
Separation voltage: 0.5 kV

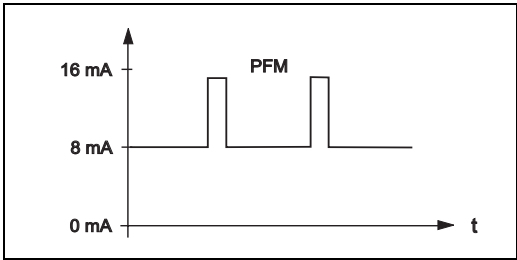

TI418FS2

Frequency: 17 to 185 Hz


Electrical connection

Two-wire connection for separate switching unit

For connecting to switching units
Nivotester FTC325, FTC625, FTC470Z, FTC471Z
from Endress+Hauser.

PFM signal 17 to 185 Hz

Switching between minimum/maximum
safety in the Nivotester.

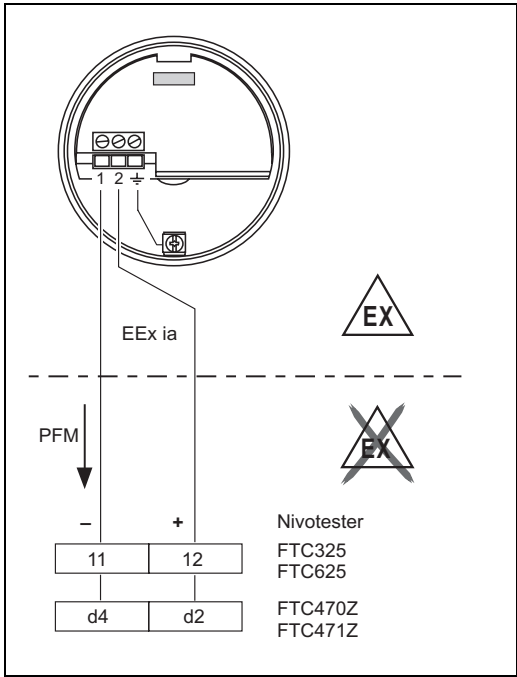

TI418FS3

Output signal

PFM 60 to 185 Hz (Endress+Hauser)

Signal on alarm

Mode	Output signal	LEDs green red
Normal operation	60...185 Hz 1 -----> 2	
Maintenance required * 	60...185 Hz 1 -----> 2	
Instrument failure 	< 20 Hz 1 -----> 2	

TI418FenS4

Lit
 Flashes
 Unlit


TI418F44

Connectable load

- Floating relay contacts in the connected switching unit Nivotester FTC325, FTC625, FTC470Z, FTC471Z
- For the contact load capacity, refer to the technical data of the switching device.

Electronic insert FEI58 (NAMUR H-L edge)

Power supply	Power consumption: < 6 mW at I < 1 mA; < 38 mW at I = 2.2 to 4 mA Interface connection data: IEC 60947-5-6
--------------	---

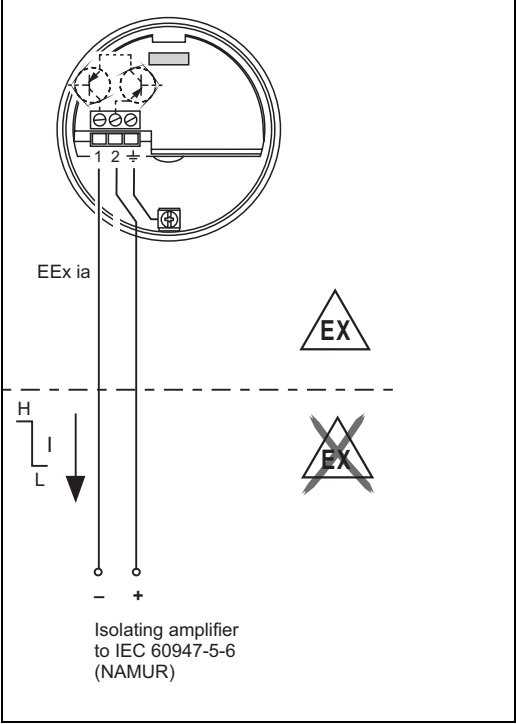Electrical connection	Two-wire connection for separate switching unit For connecting to isolating amplifiers as per NAMUR (IEC 60947-5-6), e.g. FXN421, FXN422, FTL325N, FTL375N from Endress+Hauser. Change in output signal from high to low current in event of point level detection. (H-L edge) Additional function: Test key on the electronic insert. Pressing the key interrupts the connection to the isolating amplifier.  Note! In the case of Ex-d operation, the additional function can only be used if the housing is not exposed to an explosive atmosphere. Connection to Multiplexer: set 3 s as the cycle time at least.  L00-FTL5xxxx-04-05-xx-en-002
-----------------------	---

Output signal	 = Lit  = Flashes  = Unlit	Fail-safe mode	Level	Output signal	LEDs green yellow
		Max.		+ 2.2 ... 3.5 mA 2 → 1	 
				+ 0.6 ... 1.0 mA 2 → 1	 
		Min.		+ 2.2 ... 3.5 mA 2 → 1	 
				+ 0.6 ... 1.0 mA 2 → 1	 

L00-FTL5xxxx-04-05-xx-en-007

Signal on alarm	Output signal in the event of damage to the sensor: < 1.0 mA
-----------------	--

Connectable load	■ See the technical data of the connected isolating amplifier as per IEC 60947-5-6 (NAMUR) ■ Connection also to isolating amplifiers which have special safety circuits (I > 3.0 mA)
------------------	---

Power supply

Electrical connection

Connection compartment

Five housings with the following protection classes are available:

Housing	Standard	EEx ia	EEx d	Gas-tight process seal
Polyester housing F16	X	X	–	–
Stainless steel housing F15	X	X	–	–
Aluminum housing F17	X	X	–	–
Aluminum housing F13	X	X	X	X
Aluminum housing T13 (with separate connection compartment)	X	X	X	X

Connector

In the case of the versions with a connector (M12 or 7/8"), the housing does not have to be opened to connect the signal cable.

PIN assignment for the M12 connector (PROFIBUS PA standard, HART)

	PIN	Meaning for FEI52, FEI53	Meaning for FEI55, FEI57S, FEI58
	1	External load/ voltage output	Not assigned
	2	Not assigned	Not assigned
	3	Signal –	Signal –
	4	Signal +	Signal +

L00-FMxxxxxx-04-00-00-yy-016

PIN assignment for the 7/8" connector (Fieldbus FOUNDATION standard, HART)

	PIN	Meaning for FEI52, FEI53	Meaning for FEI55, FEI57S, FEI58
	1	Signal –	Signal –
	2	Signal +	Signal +
	3	External load/ voltage output	Not assigned
	4	Ground	Ground

L00-FMxxxxxx-04-00-00-yy-017

Cable entry

- Cable gland: M20x1.5 (for EEx d only cable entry M20)
Two cable glands included in scope of delivery.
- Cable entry: G ½, NPT ½, NPT ¾ or M20 thread


Performance characteristics

Reference operating conditions	■ Temperature: +20 °C ±5 °C ■ Pressure: 1013 mbar abs. ±20 mbar ■ Humidity: 65 % ±20% ■ Medium: water from mains (conductivity ≥ 180 µS/cm)
Switch point	■ Uncertainty as per DIN 61298-2: max ±0.3% ■ Non-repeatability (reproducibility) as per DIN 61298-2: max. ±0.1 %
Ambient temperature effect	Electronic insert < 0.06 % / 10 K related to the full scale value Separate housing Capacitance change of connecting cable per meter 0.15 pF/10K

Human interface

Electronic inserts

FEI51, FEI52, FEI54, FEI55

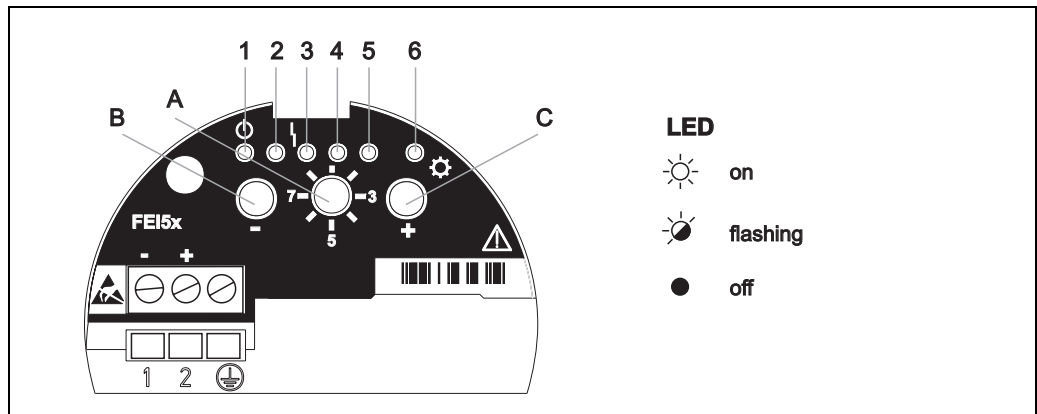

BA300Fen015


Green LED 1 (ready for operation), red LED 3 (error indicated), yellow LED 6 (* switching state)

Function switch position	Function	- key	+ key	Light emitting diodes (LED signals)					
				1 (green)	2 (green)	3 (red)	4 (green)	5 (green)	6 (yellow)
1	Operation			Flashes Operational LED	On (MIN-SIL)	Flashes (warning/ alarm)	On (MAX-SIL)		On/off/ flashes
	Restore factory setting	Press both keys for approx. 20 s		On	->	->	->	->	On/off/ flashes
2	Empty calibration	Press		On (present)					On/off/ flashes
	Full calibration		Press					On (present)	On/off/ flashes
	Reset: Calibration and switchpoint adjustment	Press both keys for approx. 10 s		On	->	->	->	->	On/off/ flashes
3	Switch point shift	Press for <	Press for >	On (2 pF)	Off (4 pF)	Off (8 pF)	Off (16 pF)	Off (32 pF)	On/off/ flashes
4	Measuring range	Press for <		On (500 pF)	Off (1600 pF)				On/off/ flashes
	Two-point control Δs		Press once					On	On/off/ flashes
	Buildup mode		Press twice				On	On	On/off/ flashes
5	Switching delay	Press for <	Press for >	Off (0.3 s)	On (1.5 s)	Off (5 s)	Off (10 s)		On/off/ flashes
6	Self-test (function test)	Press both keys		Off (inactive)				Flashes (active)	On/off/ flashes
7	MIN-/MAX Fail-safe mode	Press for MIN	Press for MAX	Off (MIN)				On (MAX)	On/off/ flashes
	SIL mode* lock/unlock	Press both keys			On (MIN-SIL)		On (MAX-SIL)		On/off/ flashes
8	Upload/download sensor DAT (EEPROM)	Press for download	Press for upload	Flashes (download)				Flashes (upload)	On/off/ flashes

* Only in conjunction with FEI55 electronic insert (SIL).


Electronic inserts

FEI53, FEI57S

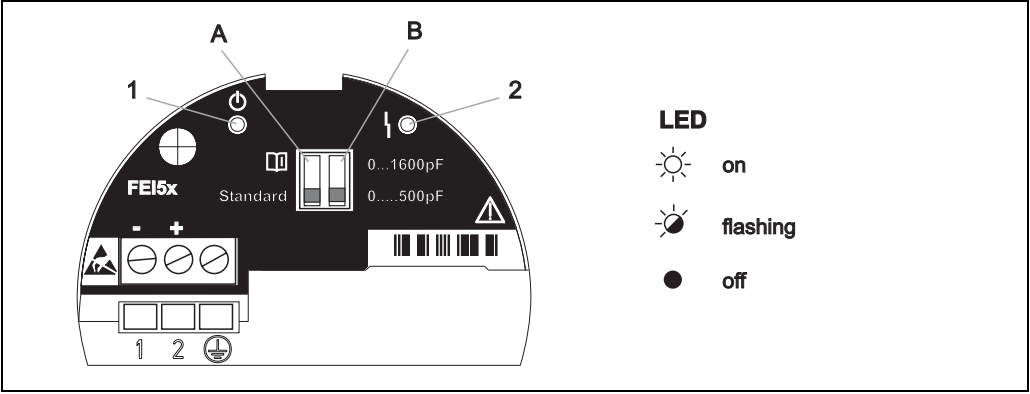


BA300Fen016

Green LED (⏻ ready for operation), red LED (⚡ error indicated)

DIP switch	Function
	
A Standard 	Standard ¹⁾ : If the measuring range is exceeded no alarm is output.
A  	 : If the measuring range is exceeded an alarm is output.
B  0.....500pF	Measuring range: The measuring range is between 0 and 500 pF Span: The span is between 5 and 500 pF.
B  0...1600pF	Measuring range: The measuring range is between 0 and 1600 pF Span: The span is between 5 and 1600 pF.

Electronic insert

FEI58

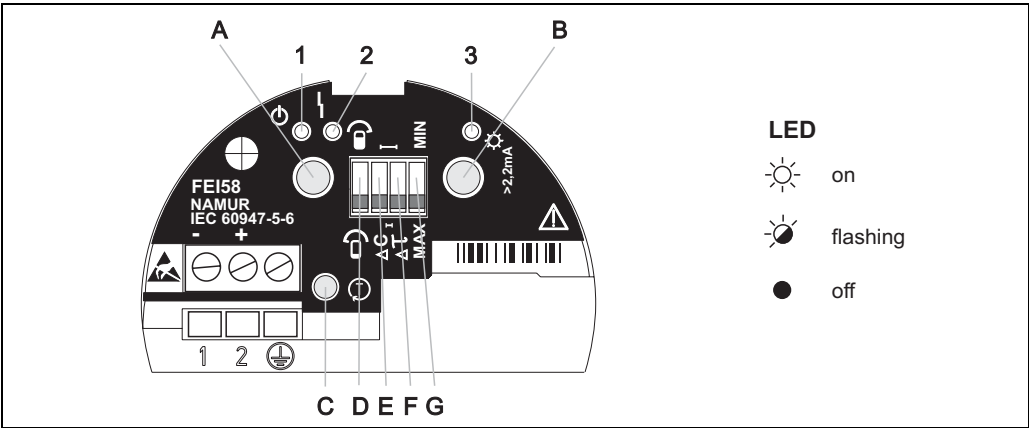

BA299Fen010

Green LED 1 (☀ ready for operation), red LED 2 (⚡ error indicated), yellow LED 3 (⚡ switching state)

DIP switches (C, D, E, F)		Function
D		The probe is covered during calibration.
D		The probe is uncovered during calibration.
E		Switchpoint adjustment: 10 pF
E		Switchpoint adjustment: 2 pF
F		Switching delay: 5 s
F		Switching delay: 1 s
G		Fail-safe mode: MIN The output switches safety-oriented when the probe is uncovered (signal on alarm). For use for dry running protection and pump protection for example
G		Fail-safe mode: MAX The output switches safety-oriented when the probe is covered (signal on alarm). For use with overflow protection for example

Key			Function
A	B	C	
X			Display diagnostic code
	X		Display calibration situation
X	X		Perform calibration (during operation)
X	X		Delete calibration points (during startup)
		X	Test key , (disconnects the transmitter from the switching unit)

Certificates and approvals

CE approval

The devices are designed to meet state-of-the-art safety requirements, have been tested and left the factory in a condition in which they are safe to operate. The devices comply with the applicable standards and regulations that are listed in the EC Declaration of Conformity and thus meet the legal requirements of the EC Directives. Endress+Hauser confirms the conformity and successful testing of the device by affixing the CE mark.

Additional certification

- See also "Ordering information" →  44
 - AD2000
The wetted material (316L) corresponds to AD2000 – W0/W2
-

Other standards and guidelines**EN 60529**

Degrees of protection by housing (IP code)

EN 61010

Protection measures for electrical equipment for measurement, control, regulation and laboratory procedures

EN 61326

Interference emission (Class B equipment), interference immunity (Appendix A – Industrial).

NAMUR

Association for Standards for Control and Regulation in the Chemical Industry

IEC 61508

Functional safety

IEC 60947-5-6

Low-voltage switchgear and control gear; DC interface for proximity sensors and switching amplifiers (NAMUR)

Ordering information



Note!

In this list, versions which are mutually exclusive are not marked.

Solicap M FTI55

10	Approval:				
	A	Non-hazardous areas			
	B	ATEX II 1/3 D			
	C	ATEX II 1/2 D			
	F	ATEX II 1 D, 1/2 D, 1/3 D EEx ia D			
	L	CSA/FM IS	Cl. I, II, III,	Div. 1+2, Gr. A-G	
	M	CSA/FM XP	Cl. I, II, III,	Div. 1+2, Gr. A-G	
	N	CSA/FM DIP	Cl. I, II, III,	Div. 1+2, Gr. E-G	
	S	TIIS Ex ia IIC T3			
	T	TIIS Ex d IIC T3			
	3	NEPSI	DIP A20		
	Y	Special version, to be specified			

20	Inactive length L3:				
	A	Not selected			
	B	Not selected + 125 mm/5 inch	316L		
		Active buildup compensation			
	1	 mm	316L		
	5	 inch	316L		
	9	Special version			

30	Active length L1:				
	A	 mm,	steel		
	B	325 mm,	steel		
	C	 mm,	316L		
	D	325 mm,	316L		
	E	600 mm,	steel		
	H	 inch,	steel		
	K	13 inch,	steel		
	M	 inch,	316L		
	N	13 inch,	316L		
	P	24 inch,	steel		
	Y	Special version, to be specified			

40	Insulation:				
	1	fully insulated PE, max. 80 °C			
	2	75 mm L2,	partially insulated PPS,	max. 180 °C	
	3	3 inch L2,	partially insulated PPS,	max. 180 °C	
	9	Special version, to be specified			

50	Process connection:				
	AFJ	2",	150 lbs RF	316/316L	
	AGJ	3",	150 lbs RF	316/316L	
	AHJ	4",	150 lbs RF	316/316L	
	BSJ	DN80,	PN10/16 A	316L	EN1092-1 (DIN2527 B)
	BTJ	DN100,	PN10/16 A	316L	EN1092-1 (DIN2527 B)
	B3J	DN50,	PN25/40 A	316L	EN1092-1 (DIN2527 B)
	KFJ	10K 50,	RF	316L	JIS B2220
	KGJ	10K 80,	RF	316L	JIS B2220
	KHJ	10K 100,	RF	316L	JIS B2220
	RGJ	NPT 1½,		316L	thread ANSI
	RG1	NPT 1½,		steel	thread ANSI
	RVJ	R 1½,		316L	thread DIN2999
	RV1	R 1½,		steel	thread DIN2999
	YY9	Special version, to be specified			

60	Electronics; output:				
	1	FEI51; 2-wire		19 to 253VAC	
	2	FEI52; 3-wire PNP,		10 to 55VDC	
	3	FEI53; 3-wire,		3 to 12 V signal	
	4	FEI54; relay DPDT,		19 to 253VAC, 19 to 55VDC	
	5	FEI55; 8/16 mA,		11 to 36VDC	

Endress+Hauser 45

Solicap M FTI56

10	Approval:				
	A	Non-hazardous areas			
	B	ATEX II 1/3 D			
	C	ATEX II 1/2 D			
	F	ATEX II 1 D, 1/2 D, 1/3 D EEx ia D			
	L	CSA/FM IS	Cl. I, II, III,	Div. 1+2, Gr. A-G	
	M	CSA/FM XP	Cl. I, II, III,	Div. 1+2, Gr. A-G	
	N	CSA/FM DIP	Cl. I, II, III,	Div. 1+2, Gr. E-G	
	S	TIIS Ex ia IIC T3			
	T	TIIS Ex d IIC T3			
	3	NEPSI	DIP A20		
	Y	Special version, to be specified			
20	Inactive length L3:				
	A	Not selected			
	1	 mm	316L		
	5	 inch	316L		
	9	Special version			
30	Active length L1; tensioning weight:				
	A	 mm,	6 mm rope	316L;	316L
	B	 mm,	12 mm rope	316L;	316L
	C	 mm,	8 mm rope	galvanized steel;	steel
	D	 mm,	14 mm rope	galvanized steel;	steel
	H	 inch,	0.2" rope	316L;	316L
	K	 inch,	0.5" rope	316L,	316L
	M	 inch,	0.3" rope	galvanized steel;	steel
	N	 inch,	0.6" rope	galvanized steel;	steel
	Y	Special version, to be specified			
40	Insulation:				
	1	fully insulated PA, max. 120 °C			
	2	500 mm L2,	partially insulated PTFE, max. 180 °C		
	9	Special version, to be specified			
50	Process connection:				
	AFJ	2",	150 lbs RF	316/316L	
	AGJ	3",	150 lbs RF	316/316L	
	AHJ	4",	150 lbs RF	316/316L	
	BSJ	DN80,	PN10/16 A	316L	EN1092-1 (DIN2527 B)
	BTJ	DN100,	PN10/16 A	316L	EN1092-1 (DIN2527 B)
	B3J	DN50,	PN25/40 A	316L	EN1092-1 (DIN2527 B)
	KFJ	10K 50,	RF	316L	JIS B2220
	KGJ	10K 80,	RF	316L	JIS B2220
	KHJ	10K 100,	RF	316L	JIS B2220
	RGJ	NPT 1½		316L	thread ANSI
	RG1	NPT 1½,		steel	thread ANSI
	RVJ	R 1½,		316L	thread DIN2999
	RV1	R 1½,		steel	thread DIN2999
	YY9	Special version, to be specified			
60	Electronics; output:				
	1	FEI51; 2-wire	19 to 253VAC		
	2	FEI52; 3-wire PNP,	10 to 55VDC		
	3	FEI53; 3-wire,	3 to 12 V signal		
	4	FEI54; relay DPDT,	19 to 253VAC, 19 to 55VDC		
	5	FEI55; 8/16 mA,	11 to 36VDC		
	7	FEI57S;2-wire PFM			
	8	FEI58; NAMUR+test key (H-L signal)			
	W	Prepared for FEI5x			
	Y	Special version, to be specified			
70	Housing:				
	1	F15 316L	IP66, NEMA4X		
	2	F16 polyester	IP66, NEMA4X		

Endress+Hauser 47

Accessories

Weather protection cover For F13 and F17 housing
Order number: 71040497

**Overvoltage protection
HAW56x**




Overvoltage protection (housing)

- HAW569-A11A (non-hazardous)
- HAW569-B11A (hazardous area)

Note!

These two versions can be screwed directly into the housing (M20x1.5).

Surge arrester for limiting overvoltage in signal lines and components.

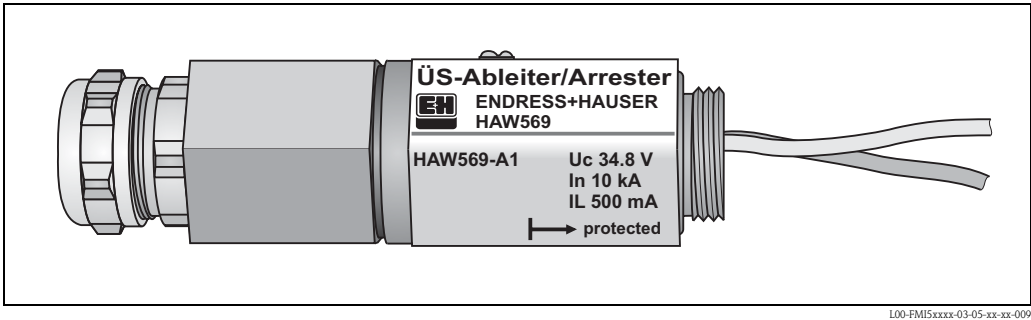

L00-FM15xxxx-03-05-xx-xx-009

Overvoltage protection (cabinet)

- HAW562Z (hazardous area)

The HAW562Z module can be used if installing in cabinets.

Spare parts

Electronic inserts

Electronic insert	Parts number
FEI51	71042887
FEI52	71025819
FEI53	71025820
FEI54	71025814
FEI55	71025815
FEI57S	71025816
FEI58	71100895



Note!

- You can order spare parts directly from your E+H service organization by quoting the order number (see below).
- Before ordering, please note that all ordered spare parts must correspond with the indications on your nameplate. Otherwise, the indications on the nameplate will no longer correspond with the instrument version.

Housing cover

Cover	Parts number
For aluminum housing F13: gray with sealing ring	52002698
For stainless steel housing F15: with sealing ring	52027000
For stainless steel housing F15: with clasp and sealing ring	52028268
For polyester housing F16, flat: gray with sealing ring	52025606
For aluminum housing F17, flat: with sealing ring	52002699
For aluminum housing T13, flat: gray with sealing ring/electronics compartment	52006903
For aluminum housing T13, flat: gray with sealing ring/connection compartment	52007103

Seal set for stainless steel housing

- Seal set for stainless steel housing F15: with 5 sealing rings
52028179

Documentation



Note!

This documentation is available on the product pages at www.endress.com

Technical Information

- Nivotester FTL325N
TI353F/00/en
- Nivotester FTL375N
TI361F/00/en
- EMC test procedures
TI241F/00/en

Operating Instructions

- Solicap M FTI55, FTI56
BA300F/00/en

Certificates

Safety information (ATEX)

- Solicap M FTI55, FTI56
ATEX II 1 D Ex tD A20 IP65 T 90 °C,
ATEX II 1/2 D Ex tD A20/A21 IP65 T 100 °C
XA389F/00/a3
- Solicap M FTI55, FTI56
DIP A21 T_A, T 100°C IP65
NEPSI GYJ071369
XA426F/00/a3

Control Drawings (for FM and CSA)

- Solicap M FTI55, FTI56
FM ZD222F/00/en
- Solicap M FTI55, FTI56
CSA ZD225F/00/en

Functional safety (SIL2/SIL3)

- Solicap M FTI55, FTI56
SIL
SD278F/00/en

CRN registration

- CRN 0F1988.75

Other

- AD2000
The wetted material (316L) corresponds to AD2000 – W0/W2

Patents

This product is protected by at least one of the patents listed below.
Further patents are under development.

- DE 103 22 279,
WO 2004 102 133,
US 2005 003 9528
- DE 203 13 695,
WO 2005 025 015

Instruments International

Endress+Hauser
Instruments International AG
Kaegenstrasse 2
4153 Reinach
Switzerland

Tel. +41 61 715 81 00
Fax +41 61 715 25 00
www.endress.com
info@ii.endress.com

Endress+Hauser 
People for Process Automation

